


Type 5260 Two Stage Split-Case Pumps
with Mechanical Shaft Seals

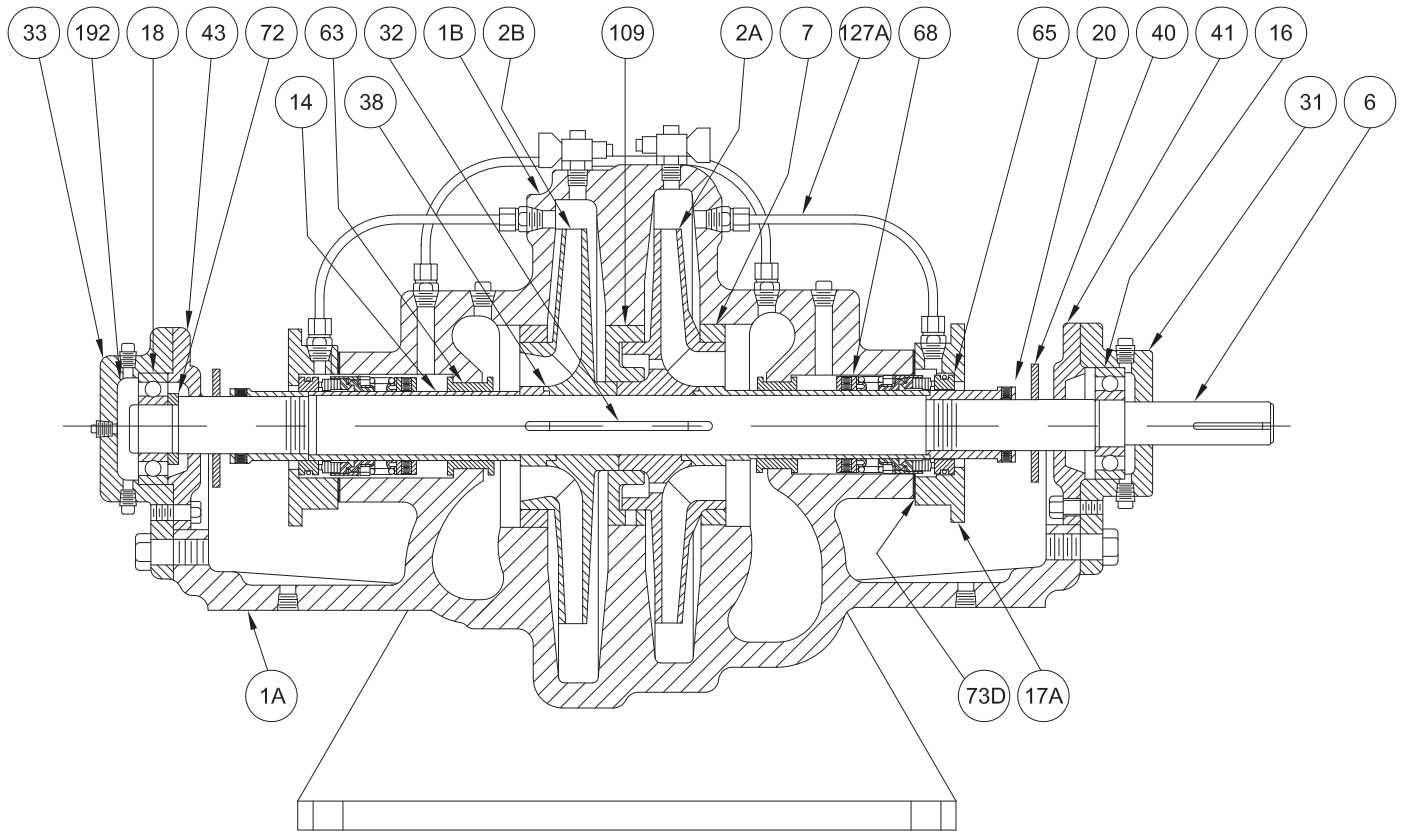

WARNING:
CANCER AND REPRODUCTIVE HARM -
WWW.P65WARNINGS.CA.GOV


Item No.	Description
1A	Lower Half Casing
1B	Upper Half Casing
* 2A	Impeller (1st Stage)
* 2B	Impeller (2 nd Stage)
6	Shaft
* 7	Casing Ring
±* 8	Impeller Ring (Not Shown)
* 14	Shaft Sleeve
* 16	Ball Bearing (inboard)
17A	Seal Cap
* 18	Ball Bearing (outboard)
20	Shaft Sleeve Nut
31	Bearing Housing (inboard)
* 32	Impeller Key
33	Bearing Housing (outboard)

Item No.	Description
* 38	Shaft Sleeve Gasket
40	Deflector (Liquid)
41	Bearing Cap (inboard)
43	Bearing Cap (outboard)
63	Stuffing Box Bushing
* 65	Mechanical Seal
68	Seal Collar
72	Thrust Collar
* 73	Casing Gasket - Suction Side (Not Shown)
* 73A	Casing Gasket - Discharge Side (Not Shown)
* 73D	Gasket (Seal Cap)
* 109	Interstage Diaphragm
127A	Seal Piping
192	Retaining Ring (Bearing)

(*) For Domestic Service we recommend these parts be carried in stock as spares
(±) Double Wearing Rings furnished as special equipment ONLY.

Repair Parts

Type 5260 Two Stage Split-Case Pumps
with Packed Stuffing Box & Water Jacketed Bearings

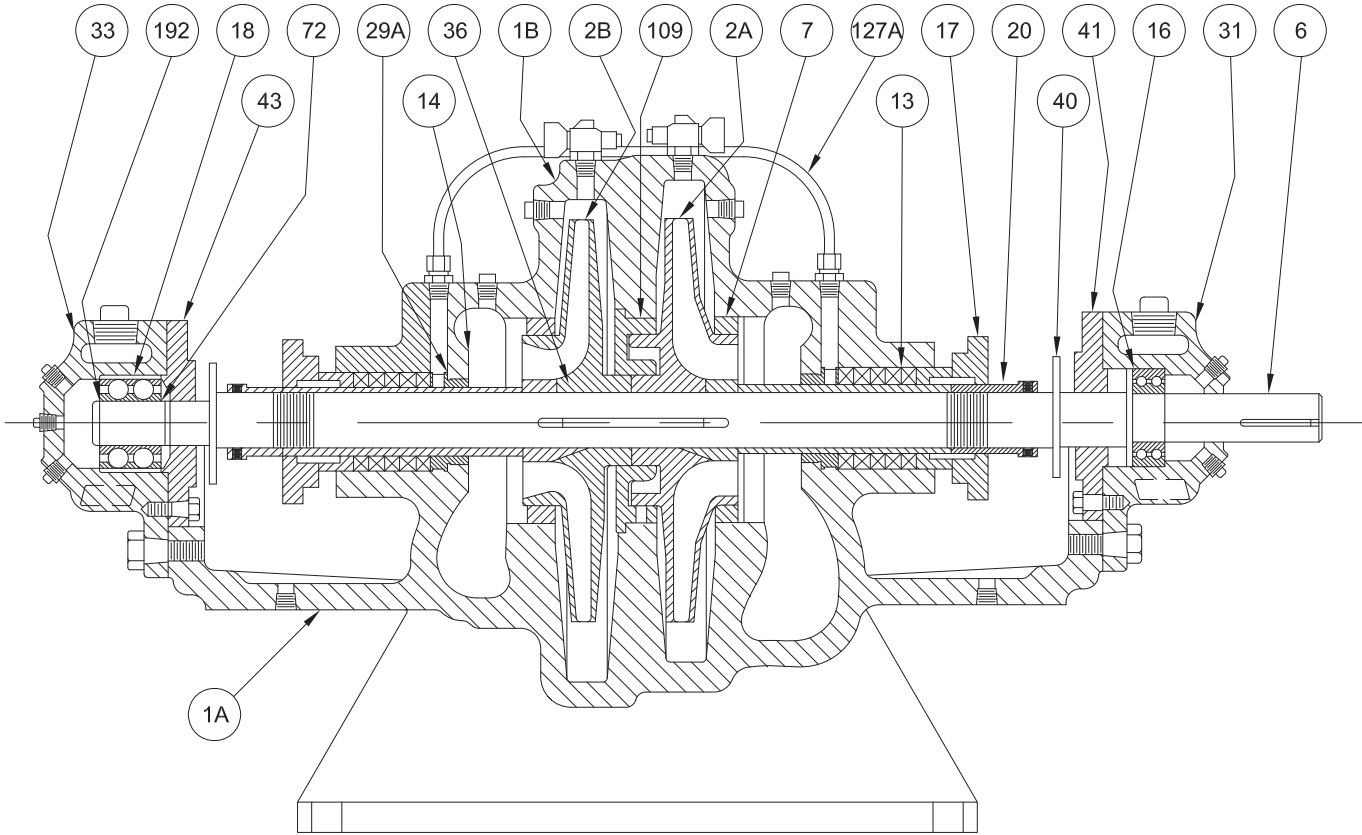


WARNING:
CANCER AND REPRODUCTIVE HARM -
WWW.P65WARNINGS.CA.GOV

Item No.	Description
1A	Lower Half Casing
1B	Upper Half Casing
* 2A	Impeller (1st Stage)
* 2B	Impeller (2 nd Stage)
6	Shaft
* 7	Casing Ring
±* 8	Impeller Ring (Not Shown)
* 13	Packing
* 14	Shaft Sleeve
* 16	Water Jacketed Bearing (inboard)
17	Stuffing Box Gland
* 18	Water Jacketed Bearing (outboard)
20	Shaft Sleeve Nut
29A	Bleed off Bushing

Item No.	Description
31	Bearing Housing (inboard)
* 32	Impeller Key
33	Bearing Housing (outboard)
* 38	Shaft Sleeve Gasket
40	Deflector (Liquid)
41	Bearing Cap (inboard)
43	Bearing Cap (outboard)
72	Thrust Collar
* 73	Casing Gasket - Suction Side (Not Shown)
* 73A	Casing Gasket - Discharge Side (Not Shown)
* 109	Interstage Diaphragm
127A	Seal Piping
192	Retaining Ring (Bearing)

(*) For Domestic Service we recommend these parts be carried in stock as spares
(±) Double Wearing Rings furnished as special equipment ONLY.

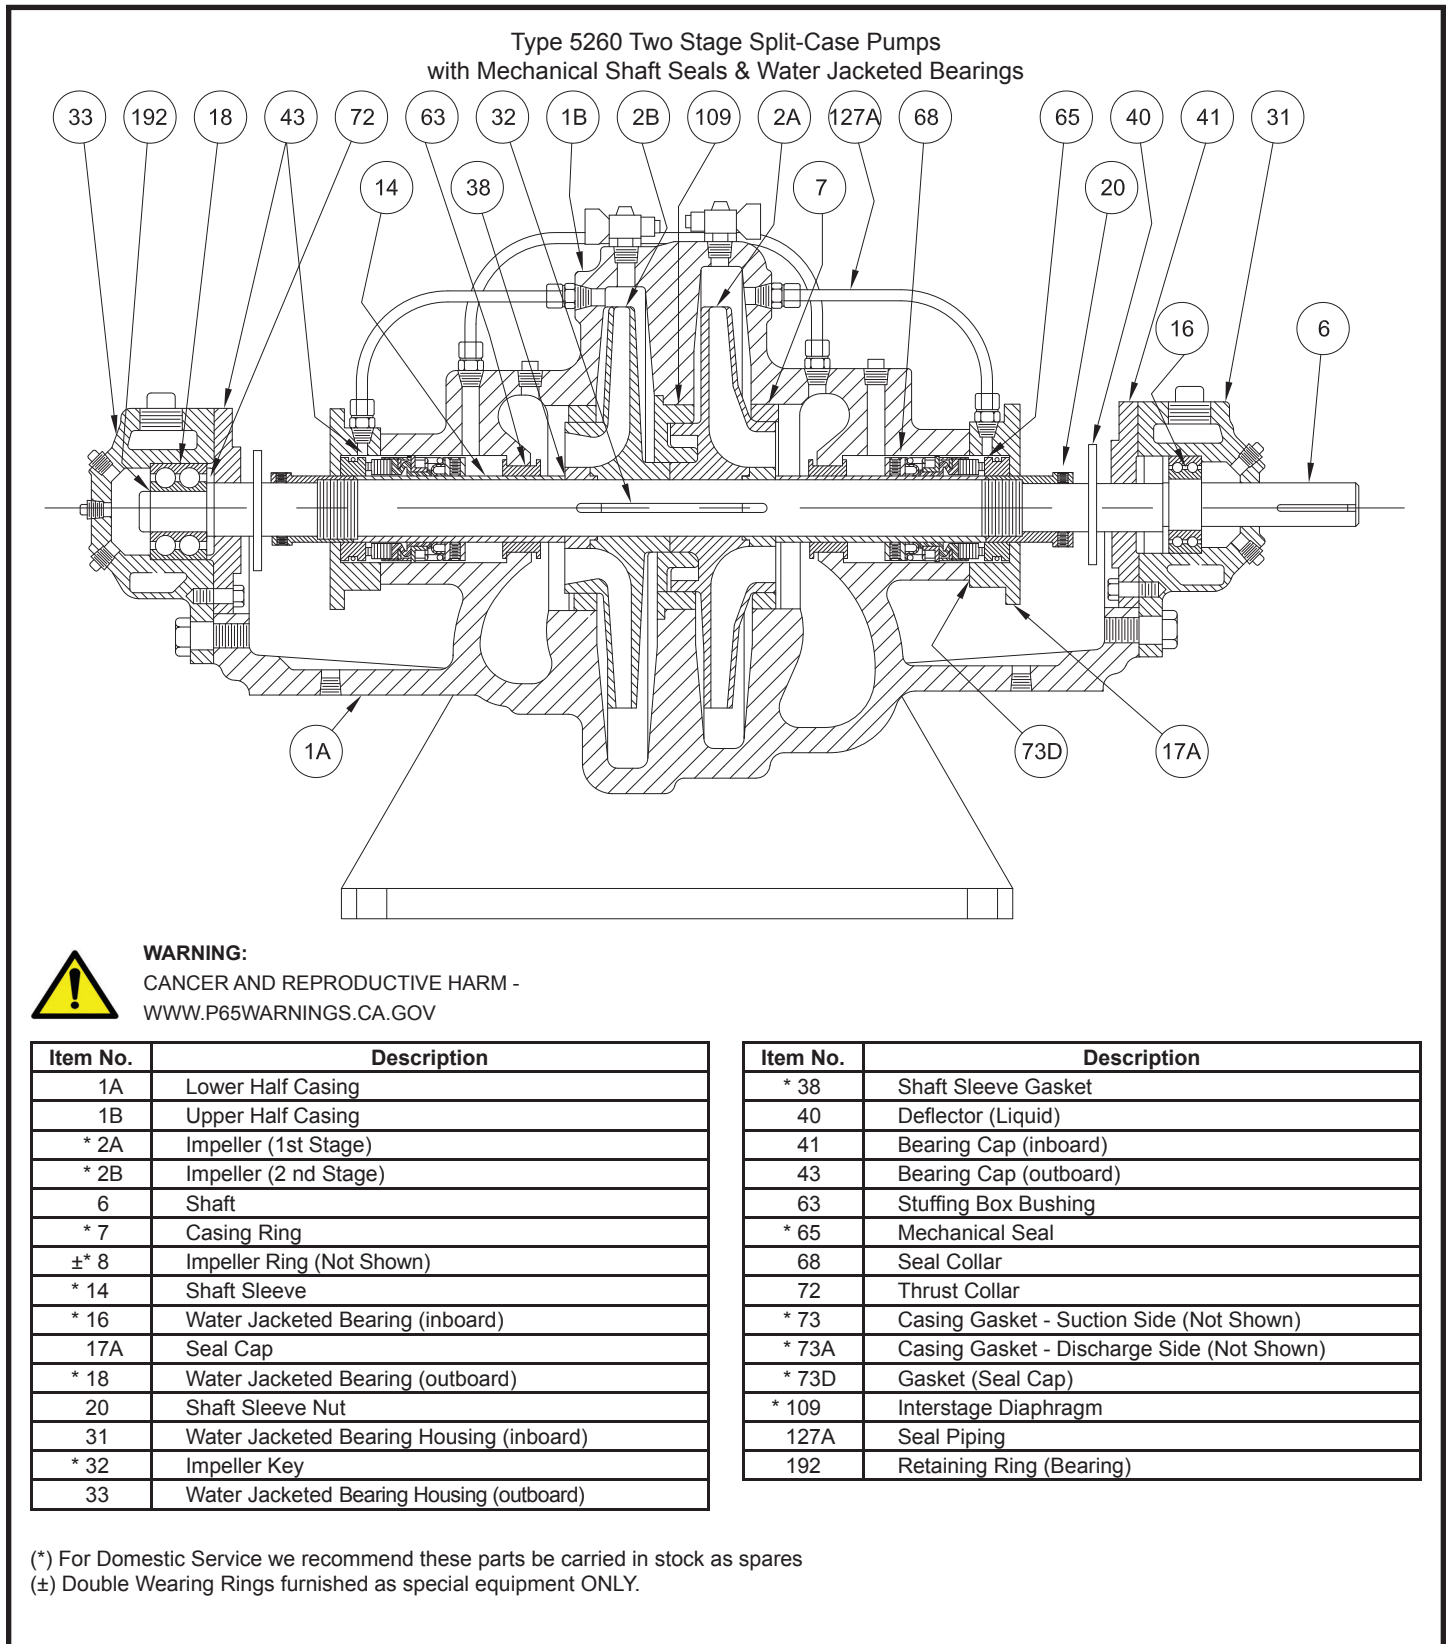

WARNING:
CANCER AND REPRODUCTIVE HARM -
WWW.P65WARNINGS.CA.GOV

Item No.	Description
1A	Lower Half Casing
1B	Upper Half Casing
* 2A	Impeller (1st Stage)
* 2B	Impeller (2 nd Stage)
6	Shaft
* 7	Casing Ring
±* 8	Impeller Ring (Not Shown)
* 14	Shaft Sleeve
* 16	Water Jacketed Bearing (inboard)
17A	Seal Cap
* 18	Water Jacketed Bearing (outboard)
20	Shaft Sleeve Nut
31	Water Jacketed Bearing Housing (inboard)
* 32	Impeller Key
33	Water Jacketed Bearing Housing (outboard)

Item No.	Description
* 38	Shaft Sleeve Gasket
40	Deflector (Liquid)
41	Bearing Cap (inboard)
43	Bearing Cap (outboard)
63	Stuffing Box Bushing
* 65	Mechanical Seal
68	Seal Collar
72	Thrust Collar
* 73	Casing Gasket - Suction Side (Not Shown)
* 73A	Casing Gasket - Discharge Side (Not Shown)
* 73D	Gasket (Seal Cap)
* 109	Interstage Diaphragm
127A	Seal Piping
192	Retaining Ring (Bearing)

(*) For Domestic Service we recommend these parts be carried in stock as spares
(±) Double Wearing Rings furnished as special equipment ONLY.

Repair Parts

5260 Series with Packed Stuffing Box		3 x 1½ x 10	Qty.	3 x 2 x 10	Qty.	4 x 3 x 10	Qty.
1	Casing	C7125-10-A2	1	C6547-10-A2	1	C7059-10-A2	1
2	Impeller - 1st Stage	C7488-B12	1	C6552-12-B12	1	C7060-B12	1
2	Impeller - 2nd Stage	C7127-B12	1	C6553-1-B12	1	C7061-B12	1
6	Shaft	C5346-E22	1	C5346-E22	1	C5352-E22	1
7	Casing Ring	A5045-5-C9	2	A5042-2-C9	1	A5052-4-C9	2
7	Casing Ring			A5042-3-C9	1		
* 7	Casing Ring	A5045-4-C9	2	A5042-4-C9	2	A5052-1-C9	2
* 8	Impeller Ring	A5056-C9	2	A5053-1-C9	2	A5062-C9	2
13	Packing	Q27-62-M2	2	Q27-62-M2	2	Q27-63-M2	1
14	Shaft Sleeve	B4100-6-J2	2	B4100-6-J2	2	B4205-3-J2	2
16	Inboard Bearing	Q10-74-E4	1	Q10-74-E4	1	Q10-25-E4	1
17	Stuffing Box Gland	A5198-B5	2	B5198-B5	2	A5199-B12	2
18	Outboard Bearing	Q10-74-E4	1	Q10-74-E4	1	Q10-25-E4	1
20	Shaft Sleeve Nut	A5348-C9	2	A5348-C9	2	A5354-C9	2
29A	Bleed off Bushing	A6631-C9	2	A6631-C9	2	A4209-1-C9	2
31	Inboard Bearing Housing	B5347-1-A2	1	B5347-1-A2	1	B5353-1-A2	1
32	Impeller Key	Q21-23-J8	1	Q21-23-J8	1	Q21-22-J8	1
33	Outboard Bearing Housing	B5347-A2	1	B5347-1-A2	1	B5353-A2	1
38	Shaft Sleeve Gasket	H1043-4-L14	2	H1043-4-L14	2	H1043-5-L14	2
40	Liquid Deflector	H1936-9-V11	2	H1936-9-V11	2	H1936-16-V11	2
41	Inboard Bearing Cap	B4103-A2	1	B4103-A2	1	B5375-A2	1
43	Outboard Bearing Cap	B4103-A2	1	B4103-A2	1	B5375-A2	1
72	Thrust Collar	A5351-E4	1	A5351-E4	1	A5357-E4	1
73	Casing Gasket	C7311-2-L14	1	C6554-1-L14	1	C7145-1-L14	1
73A	Casing Gasket	C7312-2-L14	1	C6555-1-L14	1	C7146-1-L14	1
109	Interstage Diaphragm	A7128-B12	1	A6550-10-B12	1	A7062-B12	1
127A	Seal Piping	Q30-6-C6	36"	Q30-6-C6	36"	Q30-6-C6	36"
192	Retaining Ring	Q27-56-E4	1	Q27-56-E4	1	Q27-50-E4	1

* Double Wear Ring Construction

Repair Parts

5260 Series with Mechanical Seals		3 x 1½ x 10	Qty.	3 x 2 x 10	Qty.	4 x 3 x 10	Qty.
1	Casing	C7125-10-A2	1	C6547-10-A2	1	C7059-10-A2	1
2	Impeller - 1st Stage	C7488-B12	1	C6552-12-B12	1	C7060-B12	1
2	Impeller - 2nd Stage	C7127-B12	1	C6553-1-B12	1	C7061-B12	1
6	Shaft	C5346-E22	1	C5346-E22	1	C5352-E22	1
7	Casing Ring	A5045-5-C9	2	A5042-2-C9	1	A5052-4-C9	2
7	Casing Ring			A5042-3-C9	1		
* 7	Casing Ring	A5045-4-C9	2	A5042-4-C9	2	A5052-1-C9	2
* 8	Impeller Ring	A5056-C9	2	A5053-1-C9	2	A5062-C9	2
14	Shaft Sleeve	B4100-J2	2	B4100-J2	2	B4205-J2	2
16	Inboard Bearing	Q10-74-E4	1	Q10-74-E4	1	Q10-25-E4	1
17A	Stuffing Box Gland	A6704-5-A2	2	A6704-5-A2	2	A6708-2-A2	2
18	Outboard Bearing	Q10-74-E4	1	Q10-74-E4	1	Q10-25-E4	1
20	Shaft Sleeve Nut	A5348-C9	2	A5348-C9	2	A5354-C9	2
31	Inboard Bearing Housing	B5347-1-A2	1	B5347-1-A2	1	B5353-1-A2	1
32	Impeller Key	Q21-23-J8	1	Q21-23-J8	1	Q21-22-J8	1
33	Outboard Bearing Housing	B5347-A2	1	B5347-A2	1	B5353-A2	1
38	Shaft Sleeve Gasket	H1043-4-L14	2	H1043-4-L14	2	H1043-5-L14	2
40	Liquid Deflector	H1936-9-V11	2	H1936-9-V11	2	H1936-16-V11	2
41	Inboard Bearing Cap	B4103-A2	1	B4103-A2	1	B5375-A2	1
43	Outboard Bearing Cap	B4103-A2	1	B4103-A2	1	B5375-A2	1
63	Stuffing Box Bushing	A7198-C9	2	A7198-C9	2	A7199-C9	2
65 & 80	Mechanical Seal	Q26-217-Y35	2	Q26-217-Y35	2	Q26-180-Y35	2
68	Seal Collar	A5153-C9	2	A5153-C9	2	A5147-C9	2
72	Thrust Collar	A5351-E4	1	A5351-E4	1	A5357-E4	1
73	Casing Gasket	C7311-2-L14	1	C6554-1-L14	1	C7145-1-L14	1
73A	Casing Gasket	C7312-2-L14	1	C6555-1-L14	1	C7146-1-L14	1
73D	Seal Cap Gasket	A6500-1-L14	2	A6500-1-L14	2	A6501-L14	2
109	Interstage Diaphragm	A7128-B12	1	A6550-10-B12	1	A7062-B12	1
127A	Seal Piping	Q30-6-C6	36"	Q30-6-C6	36"	Q30-6-C6	36"
192	Retaining Ring	Q27-56-E4	1	Q27-56-E4	1	Q27-50-E4	1

* Double Wear Ring Construction

Parts for Fig. 5260

Industrial Section 30
Bulletin 95

DEMING®

www.cranepumps.com

Repair Parts

5260 Series with Packed Stuffing Box & Water Cooled Thrust Bearings		3 x 1½ x 10	Qty.	3 x 2 x 10	Qty.	4 x 3 x 10	Qty.
1	Casing	C7125-10-A2	1	C6547-10-A2	1	C7059-10-A2	1
2	Impeller - 1st Stage	C7488-B12	1	C6552-12-B12	1	C7060-B12	1
2	Impeller - 2nd Stage	C7127-B12	1	C6553-1-B12	1	C7061-B12	1
6	Shaft	C6949-E22	1	C6949-E22	1	C7238-J4	1
7	Casing Ring	A5045-5-C9	2	A5042-2-C9	1	A5052-4-C9	2
7	Casing Ring			A5042-3-C9	1		
* 7	Casing Ring	A5045-4-C9	2	A5042-4-C9	2	A5052-1-C9	2
* 8	Impeller Ring	A5056-C9	2	A5053-1-C9	2	A5062-C9	2
13	Packing	Q27-62-M2	2	Q27-62-M2	2	Q27-63-M2	1
14	Shaft Sleeve	B4100-6-J2	2	B4100-6-J2	2	B4205-3-J2	2
16	Inboard Bearing	Q10-74-E4	1	Q10-74-E4	1	Q10-25-E4	1
17	Stuffing Box Gland	A5198-B5	2	B5198-B5	2	A5199-B12	2
18	Outboard Bearing	Q10-9-E4	1	Q10-9-E4	1	Q10-25-E4	1
20	Shaft Sleeve Nut	A5348-C9	2	A5348-C9	2	A5354-C9	2
29A	Bleed off Bushing	A6631-C9	2	A6631-C9	2	A4209-1-C9	2
31	Inboard Bearing Housing	B5347-1-A2	1	B5347-1-A2	1	B5353-1-A2	1
32	Impeller Key	Q21-23-J8	1	Q21-23-J8	1	Q21-22-J8	1
33	Outboard Bearing Housing	3783-2-A2	1	3783-2-A2	1	3798-2-A2	1
38	Shaft Sleeve Gasket	H1043-4-L14	2	H1043-4-L14	2	H1043-5-L14	2
40	Liquid Deflector	H1936-9-V11	2	H1936-9-V11	2	H1936-16-V11	2
41	Inboard Bearing Cap	B4103-A2	1	B4103-A2	1	B5375-A2	1
43	Outboard Bearing Cap	3783-3-A2	1	3783-3-A2	1	A4574-A2	1
73	Casing Gasket	C7311-2-L14	1	C6554-1-L14	1	C7145-1-L14	1
73A	Casing Gasket	C7312-2-L14	1	C6555-1-L14	1	C7146-1-L14	1
109	Interstage Diaphragm	A7128-B12	1	A6550-10-B12	1	A7062-B12	1
127A	Seal Piping	Q30-6-C6	36"	Q30-6-C6	36"	Q30-6-C6	36"
192	Retaining Ring	Q27-55-E4	1	Q27-55-E4	1	Q27-56-E4	1

* Double Wear Ring Construction

SECTION 95
PAGE 220
DATE 7/08

CRANE
A Crane Co. Company

PUMPS & SYSTEMS

USA: (937) 778-8947 • Canada: (905) 457-6223 • International: (937) 615-3598

Repair Parts

5260 Series with Seals & Water Cooled Thrust Bearings		3 x 1½ x 10	Qty.	3 x 2 x 10	Qty.	4 x 3 x 10	Qty.
1	Casing	C7125-10-A2	1	C6547-10-A2	1	C7059-10-A2	1
2	Impeller - 1st Stage	C7488-B12	1	C6552-12-B12	1	C7060-B12	1
2	Impeller - 2nd Stage	C7127-B12	1	C6553-1-B12	1	C7061-B12	1
6	Shaft	C6949-E22	1	C6949-E22	1	C7238-E22	1
7	Casing Ring	A5045-5-C9	2	A5042-2-C9	1	A5052-4-C9	2
7	Casing Ring			A5042-3-C9	1		
* 7	Casing Ring	A5045-4-C9	2	A5042-4-C9	2	A5052-1-C9	2
* 8	Impeller Ring	A5056-C9	2	A5053-1-C9	2	A5062-C9	2
14	Shaft Sleeve	B4100-J2	2	B4100-J2	2	B4205-J2	2
16	Inboard Bearing	Q10-74-E4	1	Q10-74-E4	1	Q10-25-E4	1
17A	Seal Cap	A6704-5-A2	2	A6704-5-A2	2	A6708-2-A2	2
18	Outboard Bearing	Q10-9-E4	1	Q10-9-E4	1	Q10-12-E4	1
20	Shaft Sleeve Nut	A5348-C9	2	A5348-C9	2	A5354-C9	2
31	Inboard Bearing Housing	B5347-1-A2	1	B5347-1-A2	1	B5353-1-A2	1
32	Impeller Key	Q21-23-J8	1	Q21-23-J8	1	Q21-22-J8	1
33	Outboard Bearing Housing	3783-2-A2	1	3783-2-A2	1	3798-2-A2	1
38	Shaft Sleeve Gasket	H1043-4-L14	2	H1043-4-L14	2	H1043-5-L14	2
40	Liquid Deflector	H1936-9-V11	2	H1936-9-V11	2	H1936-16-V11	2
41	Inboard Bearing Cap	B4103-A2	1	B4103-A2	1	B5375-A2	1
43	Outboard Bearing Cap	3783-3-A2	1	3783-3-A2	1	A4574-A2	1
63	Stuffing Box Bushing	A7198-C9	2	A7198-C9	2	A7199-C9	2
65 & 80	Mechanical Seal	Q26-217-Y35	2	Q26-217-Y35	2	Q26-180-Y35	2
68	Seal Collar	A5153-C9	2	A5153-C9	2	A5147-C9	2
73	Casing Gasket	C7311-2-L14	1	C6554-1-L14	1	C7145-1-L14	1
73A	Casing Gasket	C7312-2-L14	1	C6555-1-L14	1	C7146-1-L14	1
73D	Seal Cap Gasket	A6500-1-L14	2	A6500-1-L14	2	A6501-L14	2
109	Interstage Diaphragm	A7128-B12	1	A6550-10-B12	1	A7062-B12	1
127A	Seal Piping	Q30-6-C6	36"	Q30-6-C6	36"	Q30-6-C6	36"
192	Retaining Ring	Q27-55-E4	1	Q27-55-E4	1	Q27-56-E4	1

* Double Wear Ring Construction

Repair Parts

5260 Series with Packed Stuffing Box & Water Cooled Radial & Thrust Bearings		3 x 1½ x 10	Qty.	3 x 2 x 10	Qty.	4 x 3 x 10	Qty.
1	Casing	C7125-10-A2	1	C6547-10-A2	1	C7059-10-A2	1
2	Impeller - 1st Stage	C7488-B12	1	C6552-12-B12	1	C7060-B12	1
2	Impeller - 2nd Stage	C7127-B12	1	C6553-1-B12	1	C7061-B12	1
6	Shaft	C7209-E22	1	C7209-E22	1	C7239-E22	1
7	Casing Ring	A5045-5-C9	2	A5042-2-C9	1	A5052-4-C9	2
7	Casing Ring			A5042-3-C9	1		
* 7	Casing Ring	A5045-4-C9	2	A5042-4-C9	2	A5052-1-C9	2
* 8	Impeller Ring	A5056-C9	2	A5053-1-C9	2	A5062-C9	2
13	Packing	Q27-62-M2	2	Q27-62-M2	2	Q27-63-M2	1
14	Shaft Sleeve	B4100-6-J2	2	B4100-6-J2	2	B4205-J2	2
16	Inboard Bearing	Q10-97-E4	1	Q10-97-E4	1	Q10-25-E4	1
17	Stuffing Box Gland	A5198-B5	2	B5198-B5	2	A5199-B12	2
18	Outboard Bearing	Q10-9-E4	1	Q10-9-E4	1	Q10-12-E4	1
20	Shaft Sleeve Nut	A5348-C9	2	A5348-C9	2	A5354-C9	2
29A	Bleed off Bushing	A6631-C9	2	A6631-C9	2	A4209-1-C9	2
31	Inboard Bearing Housing	4479-1-A2	1	4479-1-A2	1	C4573-1-A2	1
32	Impeller Key	Q21-23-J8	1	Q21-23-J8	1	Q21-22-J8	1
33	Outboard Bearing Housing	3783-2-A2	1	3783-2-A2	1	3798-2-A2	1
38	Shaft Sleeve Gasket	H1043-4-L14	2	H1043-4-L14	2	H1043-5-L14	2
40	Liquid Deflector	H1936-9-V11	2	H1936-9-V11	2	H1936-16-V11	2
41	Inboard Bearing Cap	3783-3-A2	1	3783-3-A2	1	B5375-A2	1
43	Outboard Bearing Cap	3783-3-A2	1	3783-3-A2	1	A4574-A2	1
73	Casing Gasket	C7311-2-L14	1	C6554-1-L14	1	C7145-1-L14	1
73A	Casing Gasket	C7312-2-L14	1	C6555-1-L14	1	C7146-1-L14	1
109	Interstage Diaphragm	A7128-B12	1	A6550-10-B12	1	A7062-B12	1
127A	Seal Piping	Q30-6-C6	36"	Q30-6-C6	36"	Q30-6-C6	36"
192	Retaining Ring	Q27-55-E4	1	Q27-55-E4	1	Q27-56-E4	1

* Double Wear Ring Construction

Repair Parts

5260 Series with Seals & Water Cooled Radial & Thrust Bearings		3 x 1½ x 10	Qty.	3 x 2 x 10	Qty.	4 x 3 x 10	Qty.
1	Casing	C7125-10-A2	1	C6547-10-A2	1	C7059-10-A2	1
2	Impeller - 1st Stage	C7488-B12	1	C6552-12-B12	1	C7060-B12	1
2	Impeller - 2nd Stage	C7127-B12	1	C6553-1-B12	1	C7061-B12	1
6	Shaft	C7209-E22	1	C7209-E22	1	C7239-E22	1
7	Casing Ring	A5045-5-C9	2	A5042-2-C9	1	A5052-4-C9	2
7	Casing Ring			A5042-3-C9	1		
* 7	Casing Ring	A5045-4-C9	2	A5042-4-C9	2	A5052-1-C9	2
* 8	Impeller Ring	A5056-C9	2	A5053-1-C9	2	A5062-C9	2
14	Shaft Sleeve	B4100-J2	2	B4100-J2	2	B4205-J2	2
16	Inboard Bearing	Q10-97-E4	1	Q10-97-E4	1	Q10-25-E4	1
17A	Stuffing Box Gland	A6704-5-A2	2	A6704-5-A2	2	A6708-2-A2	2
18	Outboard Bearing	Q10-9-E4	1	Q10-9-E4	1	Q10-12-E4	1
20	Shaft Sleeve Nut	A5348-C9	2	A5348-C9	2	A5354-C9	2
31	Inboard Bearing Housing	4479-1-A2	1	4479-1-A2	1	C4573-1-A2	1
32	Impeller Key	Q21-23-J8	1	Q21-23-J8	1	Q21-22-J8	1
33	Outboard Bearing Housing	3783-2-A2	1	3783-2-A2	1	3798-2-A2	1
38	Shaft Sleeve Gasket	H1043-4-L14	2	H1043-4-L14	2	H1043-5-L14	2
40	Liquid Deflector	H1936-9-V11	2	H1936-9-V11	2	H1936-16-V11	2
41	Inboard Bearing Cap	3783-3-A2	1	3783-3-A2	1	B5375-A2	1
43	Outboard Bearing Cap	3783-3-A2	1	3783-3-A2	1	A4574-A2	1
63	Stuffing Box Bushing	A7198-C9	2	A7198-C9	2	A7199-C9	2
65 & 80	Mechanical Seal	Q26-217-Y35	2	Q26-217-Y35	2	Q26-180-Y35	2
68	Seal Collar	A5153-C9	2	A5153-C9	2	A5147-C9	2
73	Casing Gasket	C7311-2-L14	1	C6554-1-L14	1	C7145-1-L14	1
73A	Casing Gasket	C7312-2-L14	1	C6555-1-L14	1	C7146-1-L14	1
73D	Seal Cap Gasket	A6500-1-L14	2	A6500-1-L14	2	A6501-L14	2
109	Interstage Diaphragm	A7128-B12	1	A6550-10-B12	1	A7062-B12	1
127A	Seal Piping	Q30-6-C6	36"	Q30-6-C6	36"	Q30-6-C6	36"
192	Retaining Ring	Q27-55-E4	1	Q27-55-E4	1	Q27-56-E4	1

* Double Wear Ring Construction