


Exploded View BPDH10-L BPDH15-L

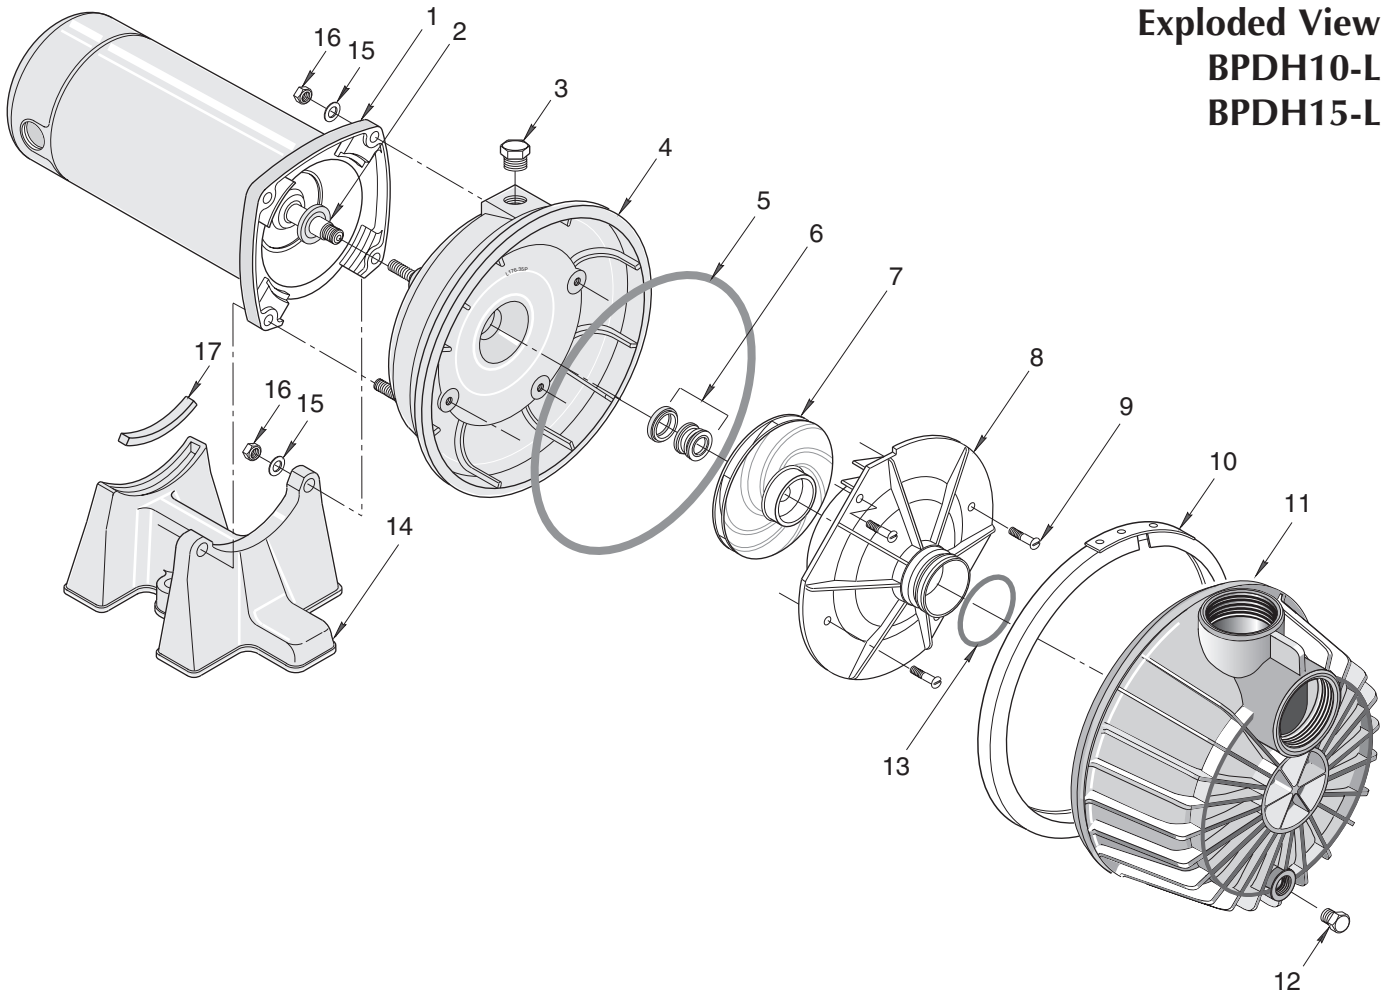

527 1193

REPAIR PARTS LIST

Key No.	Part Description	No. Used	BPDH10-L 1 HP	BPDH15-L 1-1/2 HP
1	Motor	1	A100EHL	A100FHL
2	Water Slinger	1	C69-2	C69-2
3	Priming Plug	1	WC78-39T	WC78-39T
4	Pump Body Back Half (Complete)	1	L176-47P1	L176-47P1
5	O-Ring	1	U9-399	U9-399
6	Shaft Seal for 5/8" Shaft	1	U109-6A	U9-410
7	Impeller	1	C105-92PVB	C105-92PBBB
8	Diffuser	1	C1-258PCA	C1-258PCA
9	Screw - #8 - 32 RH	4	U30-997SS	U30-997SS
10	"V" Clamp	1	C19-54SS	C19-54SS
11	Tank Body Front Half (Complete)	1	C176-66P	C176-66P
12	Drain Plug - 1/4 NPT	1	WC78-40T	WC78-40T
13	O-Ring	1	U9-226	U9-226
14	Base	1	C4-42P	C4-41P
15	Washer - 5/16	4	U43-11ZP	U43-11ZP
16	Nut - 5/16 - 18	4	U36-37ZP	U36-37ZP
17	Rubber Pad	1	C35-11	C35-11
•	Owner's Manual	1	BE190	BE190

• Not illustrated.