

WWW.BOSHART.COM

MOVING WATER FROM THE GROUND UP

Most Products are Available in Stainless Steel or Lead Free Bronze/Brass

24 Water Filter

12 Well Cap

11 Rope Hanger

14 Well Seal Vent

10 Piless Adapter

13 Well Seal

16 Insert Fitting

15 Stainless Steel Insert Adapter

9 Cable Tie

14 Well Seal Vent

23 Stainless Steel Ball Valve

19 Pressure Switch

10 Piless Adapter

13 Well Seal

16 Insert Fitting

15 Stainless Steel Insert Adapter

9 Cable Tie

8 Cable Guard

13 Well Seal

18 Nipple

22 Pressure Gauge

5 Torque Arrestor

6 Safety Rope

17 Pressure Relief Valve

20 Tank Tee (with Union Connection)

3 Heat Shrink Splice Kit

4 Stainless Steel Hose Clamp

21 Drain Valve

7 Pump Cable CANADA ONLY

1 Check Valve

2 Easy-Tie Adapter

PTFE Thread Seal Tape

Gray Magic

COMMITTED TO EXCELLENCE



Dedicated Sales Rep for Your Area



97% Fill Rate



Shipping within 24 Hours



State of the Art Warehouse System



Technical Support



Quality Control Program

ITEM #	PRODUCT	DESCRIPTION	CATALOGUE SECTION
1	CHECK VALVE	Prevents backflow into the pump when installed at the top of the pump. Installations near the pressure tank inlet holds water in the tank when the pump is not running.	10
2	EASY TIE ADAPTER	Can be used at the top and/or bottom of the drop pipe to tie off the safety rope.	4
3	HEAT SHRINK SPLICE KIT	A waterproof method of splicing electric cable.	9
4	HOSE CLAMP	Secures insert fittings and torque arrestors to poly pipe.	4
5	TORQUE ARRESTOR	Installed directly above the pump, acting as a centering device, protects the pump, cable and water pipe from torque damage when the pump starts.	9
6	SAFETY ROPE	A safety line to secure the pump to the top of the well.	9
7	PUMP CABLE CANADA ONLY	Provides the electrical connection from the pump to control box.	15
8	CABLE GUARD	Protects cable from abrading against the side of the casing.	9
9	CABLE TIE	Fastens cable to drop pipe.	9
10	PITLESS ADAPTER	Installed below the frost line pitless adapters are a sanitary connection between the pump and house. Pitless easily slide apart for pump servicing.	11
11	ROPE HANGER	Sits on the top of the casing under the well cap to tie off the safety rope.	9
12	WELL CAP	Sits on top of the well casing & can be easily removed to service the well.	11
13	WELL SEAL	Used in above the ground well systems to provide a positive seal.	11
14	WELL SEAL VENT	Used for water well ventilation.	11
15	INSERT ADAPTER	Male adapter connects the poly pipe to the pitless adapter.	4
16	INSERT FITTING	Connects poly pipe to check valve.	4
17	RELIEF VALVE	Protects against pressure buildup should the pump develop greater pressure than the maximum rating on the system.	7
18	NIPPLE	Connects the switch to the tank tee.	3
19	PRESSURE SWITCH	Signals the pump to start when the water system drops to a preset low pressure and to stop when it hits the high pressure setting.	6
20	TANK TEE	Connects the water line from the pump to the pressure tank and the service line from the tank to the house. Serves as a control center for the gauge, switch, relief valve & drain valve.	8
21	DRAIN VALVE	Boiler drain/hose bibb for easy draining of the system.	2
22	PRESSURE GAUGE	Measures water pressure in a pressure tank.	6
23	BALL VALVE	A shut off valve on supply lines from the pressure tank to the house.	2
24	WATER FILTER	Whole house filter removes sediment from water supply.	5
	THREAD SEALANT	Seals and secures metal pipe and fittings to prevent leakage.	3

25 Whaley Ave., PO Box 310
 Milverton, ON N0K 1M0
 CANADA
 Telephone: 519-595-4444
 Fax: 519-595-4380
 Toll Free: 800-561-3164

www.boshart.com

DISTRIBUTED BY: