


# CR-H, CRN-H 10•15•20

## Dismantling & Reassembly

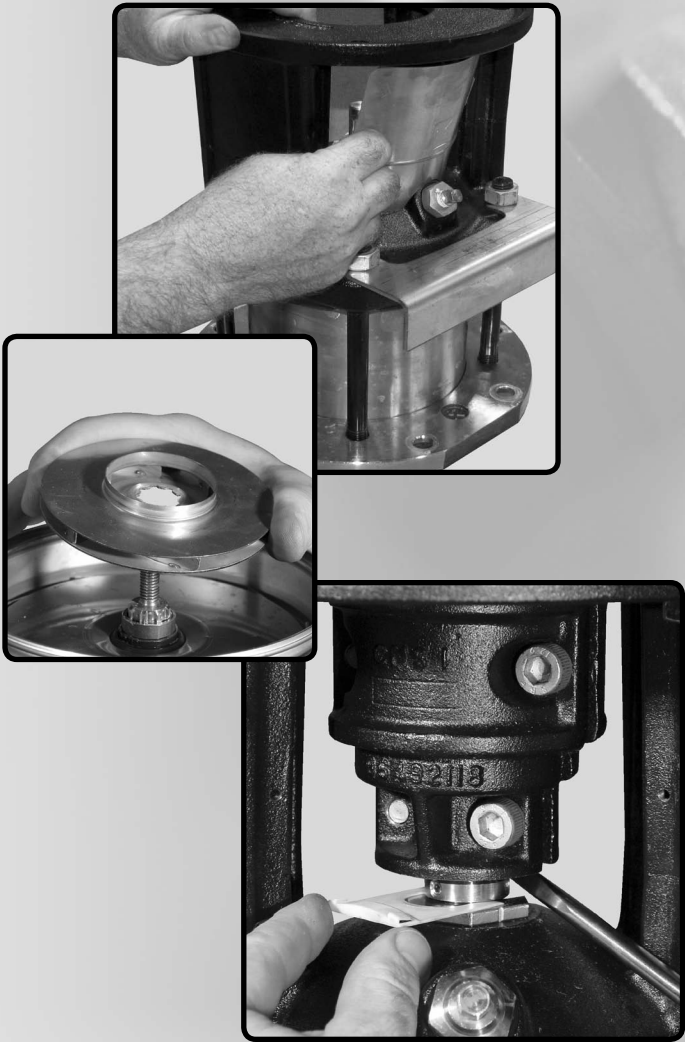

### CONTENTS

|                                                          |                |
|----------------------------------------------------------|----------------|
| <b>Dismantling Procedures.....</b>                       | <b>Page 2</b>  |
| When Should A Part Be Replaced ? .....                   | Page 10        |
| <b>Reassembly Procedures .....</b>                       | <b>Page 11</b> |
| Setting The Coupling Height.....                         | Page 18        |
| Order of Stage Assembly: CR-H, CRN-H.....                | Page 20        |
| Order of Stage Assembly: CR-H, CRN-H Low NPSH 10 .....   | Page 21        |
| Order of Stage Assembly: CR-H, CRN-H 15/20.....          | Page 22        |
| Order of Stage Assembly: CR-H, CRN-H Low NPSH 15/20 .... | Page 23        |


### TORQUES

| Position Number |                                        |                     |
|-----------------|----------------------------------------|---------------------|
| 7a              | Coupling Guard Screw .....             | 1.5 ft.-lbs./2 Nm   |
| 9               | Coupling Hex Screw                     |                     |
|                 | 5 mm M6 Screw .....                    | 10 ft.-lbs./13 Nm   |
|                 | 6 mm M8 Screw .....                    | 23 ft.-lbs./31 Nm   |
|                 | 8 mm M10 Screw .....                   | 46 ft.-lbs./62 Nm   |
| 26b             | Strap Bolt                             |                     |
|                 | 13 mm M8 x 25 mm .....                 | 11 ft.-lbs./15 Nm   |
| 28              | Motor Bolt                             |                     |
|                 | 9/16" UNC 3/8" Bolt.....               | 10 ft.-lbs./13 Nm   |
|                 | 3/4" UNC 1/2" Bolt.....                | 23 ft.-lbs./31 Nm   |
| 28g             | Allen Screw for Foot/Base.....         | 15 ft.-lbs./20 Nm   |
| 35              | Allen Screw for Discharge Flange ..... | 15 ft.-lbs./20 Nm   |
| 36              | Staybolt Nut                           |                     |
|                 | CR-H.....                              | 59 ft.-lbs./80 Nm   |
|                 | CRN-H.....                             | 74 ft.-lbs./100 Nm  |
| 56 c/e          | Allen Screw for Sleeve Flange .....    | 55 ft.-lbs./75 Nm   |
| 67              | Shaft Lock Nut.....                    | 16.3 ft.-lbs./22 Nm |
| 105 (a,b)       | Shaft Seal                             |                     |
|                 | 41 mm Nut .....                        | 26 ft.-lbs./35 Nm   |
| 113             | 2.5 mm Set Screw.....                  | 2 ft.-lbs./2.5 Nm   |

## Dismantling Procedures CR-H, CRN-H 10•15•20

These instructions cover the complete dismantling and repair of the pump after the pump has been isolated from the system. Before removing the pump from the system, make sure all valves are closed. Relieve any built up pressure by opening the vent plug screw. The power source should be turned off and locked out before starting any work. Removal of field wiring to the motor wires may be required. Color coding or numbering the wires will aid in reinstallation.


1

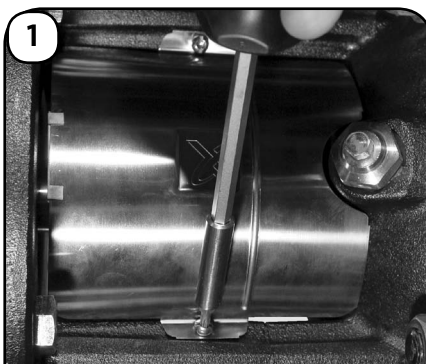

Using a slotted Screwdriver or TORX® tip T20, remove Coupling Guard Screws (Pos. 7a). Then, remove the Coupling Guards (Pos. 7).


**If only replacing the shaft seal, follow steps 1 - 7.**

2

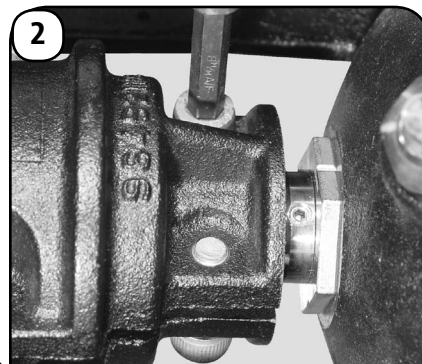


Remove the 5, 6 or 8 mm Hex Head Coupling Bolts (Pos. 9) from the Coupling Halves (Pos. 10a).

3

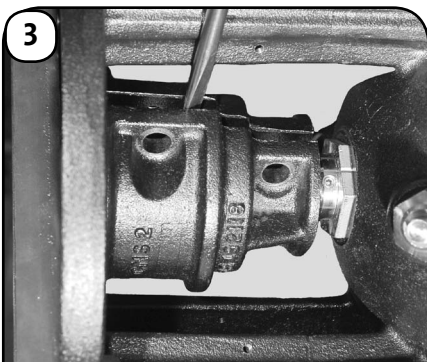

Remove Coupling Halves. Insert a slotted Screwdriver in Coupling gap and twist to free Coupling Half.

4

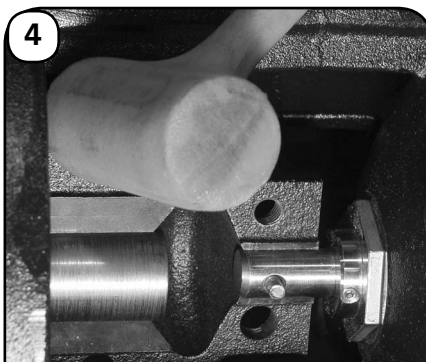

To free/remove remaining Coupling Half. Strike Coupling Half with a rubber mallet on upper edge. Remove shaft pin (Pos. 10).

**NOTE:** If you have multiple pumps, do not interchange coupling components... they are a matched set.

5

Depending on motor stool length, the motor may need to be removed to change out the shaft seal. For those units, follow step 6. For the longer motor stool, skip to step 7.


Units where you're changing out the stack or dismantling the pump, step 6 will also have to be followed.

6



### To remove the motor:


Loosen and remove the 9/16" Head UNC 3/8" or 3/4" Head UNC 1/2" Motor Bolts (Pos. 28). Loosen the Slide Rail (Pos. 90d) connecting the motor to the Base (Pos. 90), then slide the motor backward on the base. If sliding provisions are not available on the base, then use a lifting device to lift and remove the motor assembly.

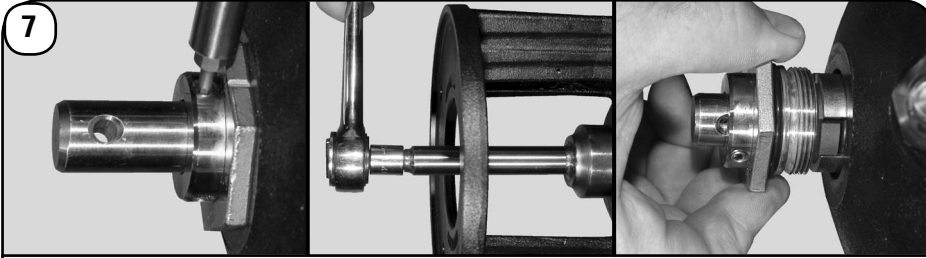


Remove the cartridge Shaft Seal (Pos. 105) by:

- Loosening the three 2.5 mm Shaft Seal Securing Allen Screws (Pos. 113) approximately 1/2 to 1 turn.
- Using the Specialty Tubular Box Spanner (00SV2107), a 41 mm ring spanner (00SV2101), or a deep socket, fully unscrew the Shaft Seal from the Motor Stool (Pos. 2) or Pump Head (Pos. 77) on N models.
- Sliding the Shaft Seal up and off the Shaft (Pos. 51).


For Shaft Seal replacement only, go to Reassembly, steps 24 & 25. For full dismantling, continue to step 8.

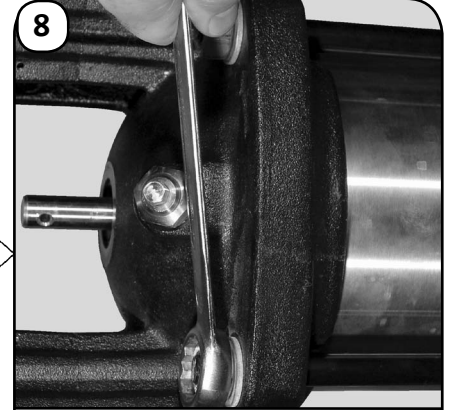


Loosen (but do not remove) the four 24 mm Staybolt Nuts (Pos. 36). These will be removed in step 12.

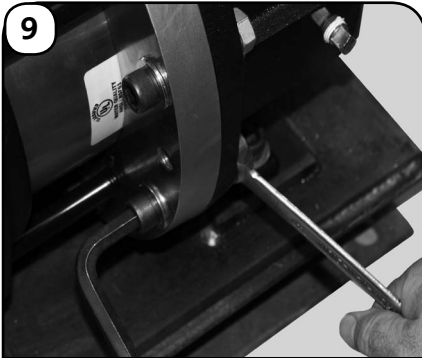

Loosen and remove all the Sleeve Flange Nuts (Pos. 56e), Allen Screws (Pos. 56c), and Washers (Pos. 56d) from the Sleeve Flange (Pos. 55b).

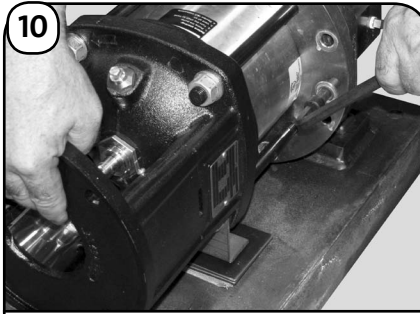

Remove the plastic plugs from the threaded jacking holes. Next, use two of the sleeve flange allen screws and place into the threaded holes of the sleeve flange. Tightened diagonally, this will force the cartridge assembly (Pos. 80a) away from the Suction/Discharge Base (Pos. 6). **Warning:** Do not allow the cartridge assembly to fall.

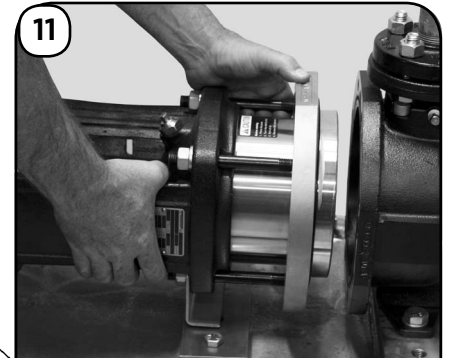

To remove the Cartridge Assembly (Pos. 80a) from the Suction/Discharge Base (Pos. 6), grab the two top staybolts and slide outward (some rocking movement may be required). **Warning:** Cartridge assemblies are heavy – a lifting device may be required.




Move the cartridge assembly to a workbench. Then, finish removing the Staybolt Nuts (Pos. 36), Washers (Pos. 66a), and Support Plate (Pos. 90c). If needed, remove Coupling Guard Screws and Guard.




Remove the Motor Stool (Pos. 2) and Pump Head (Pos. 77) on N models. (Light upward blows with a rubber mallet may be required.)


- If the pump is a standard unit, skip to Dismantling, step 28.
- For **Cool-Top®** type/equipped pumps, see Dismantling, steps 14 to 18.
- Pumps built with a **Back-to-Back Seal**, see Dismantling, steps 19 to 22.
- Pumps built with **Tandem/Quench Seal**, see Dismantling, steps 23 to 27.

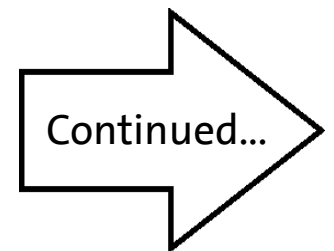


Cool-Top®

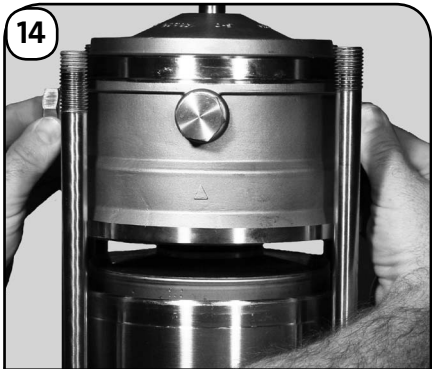


Remove the Cool-Top® assembly/Pump Head Cover (Pos. 77a). Light blows with a rubber mallet may be required to loosen assembly.

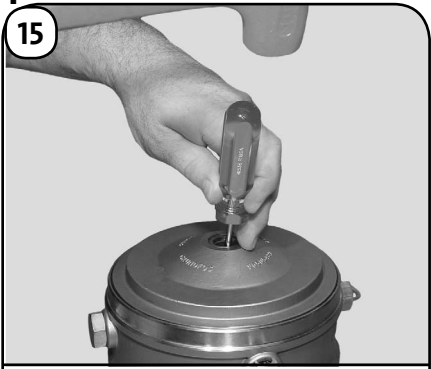

Before removing the Disk Plate (Pos. 79a) from the Pump Head (Pos. 77), inspect the Bushing (Pos. 79b). If worn, use a Flat Blade Punch or Special Punch (005V2127) and a mallet to drive out the Bushing.

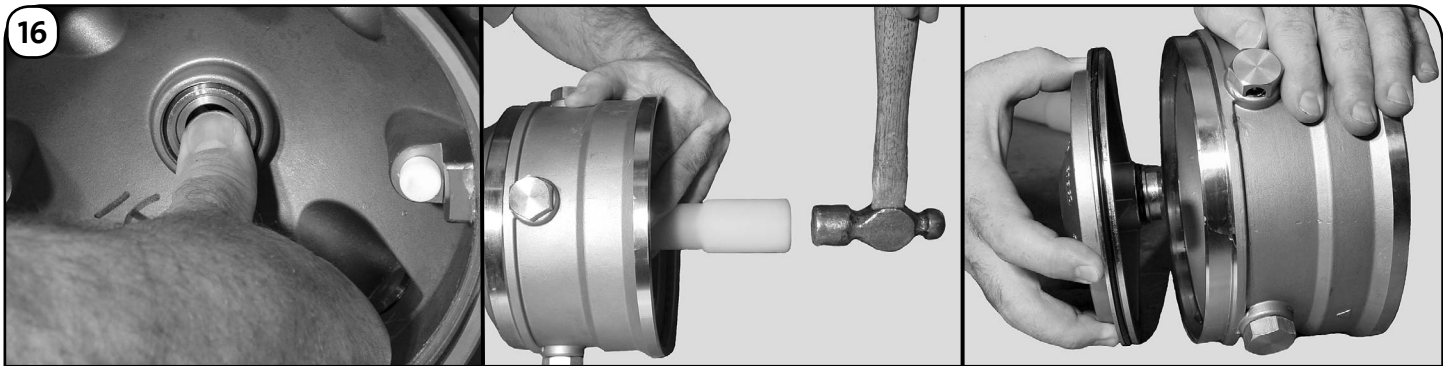

Remove the Disk Plate (Pos. 79a) from the Pump Head Cover (Pos. 77a) by pushing outward with your thumb. If stuck, use a Nylon Punch and a Mallet to drive out.

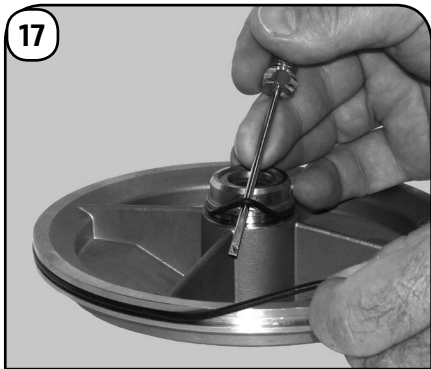




Remove the O-ring (Pos. 37c & 109a) from the Disk Plate (Pos. 79a).



Remove Sleeve O-ring (Pos. 37) from the pump Head Cover (Pos. 77a). Then, remove the PTFE Stack Compression Springs (Pos. 60a) from the Pump Head Cover.

To continue, proceed to step 28.

## Back-to-Back Seal

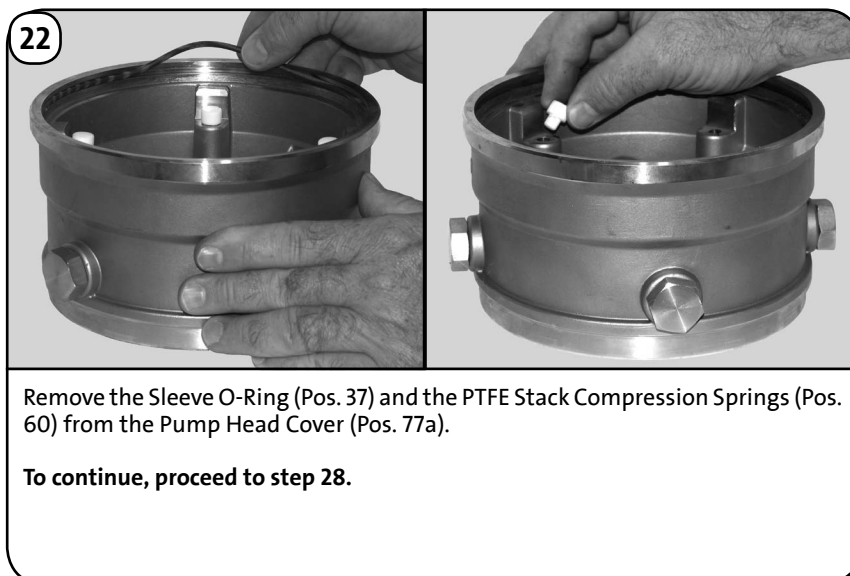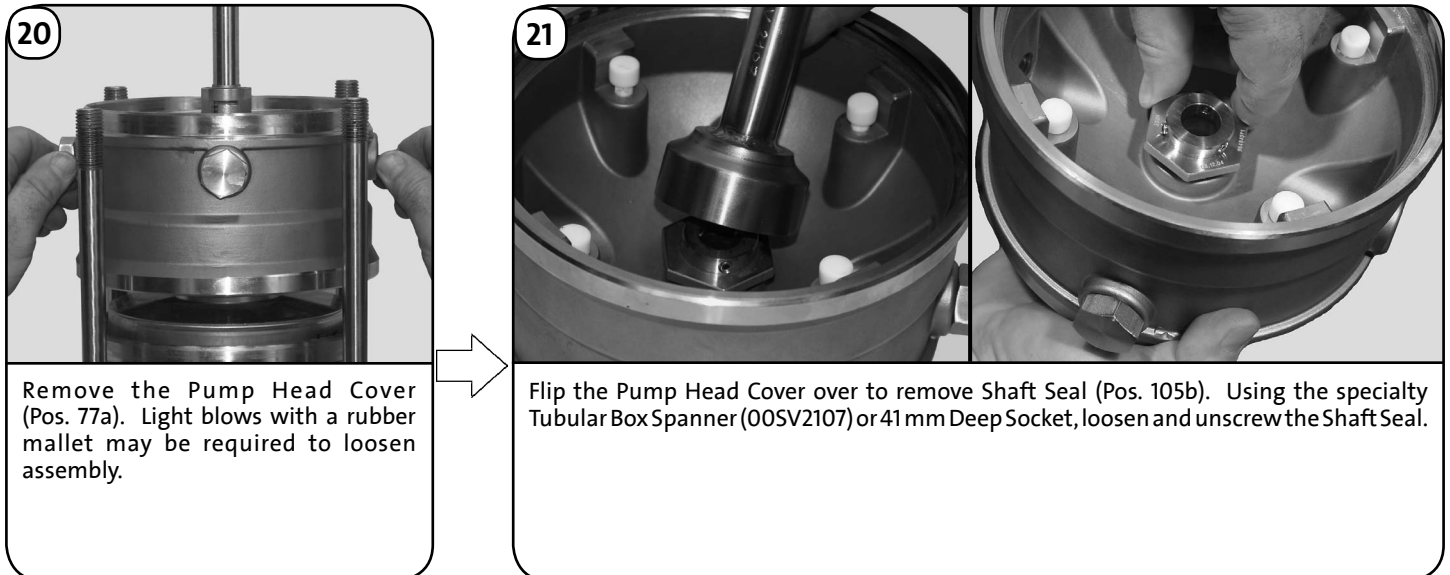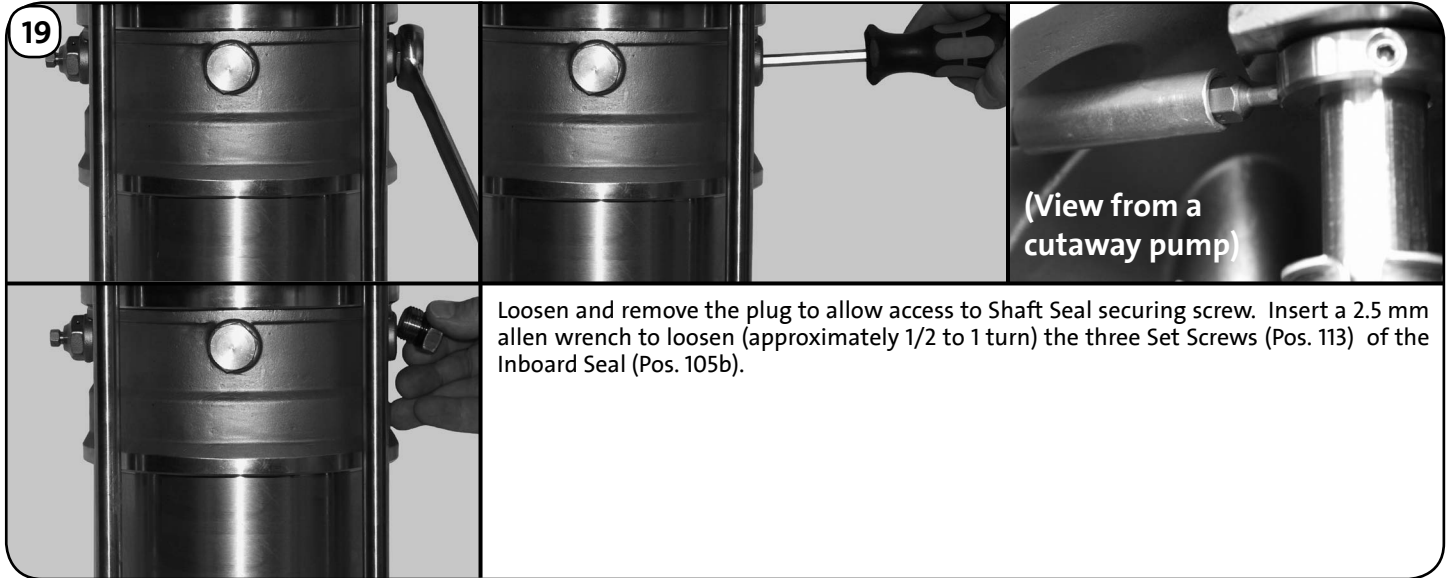


Tandem Seal



Loosen (approximately 1/2 to 1 turn) the three 2.5 mm Set Screws (Pos. 113) of the Inboard Seal (Pos. 105b).



Use specialty Tubular Box Spanner (00SV2107), a 41 mm Deep Socket, or an Open Ring Spanner to loosen.

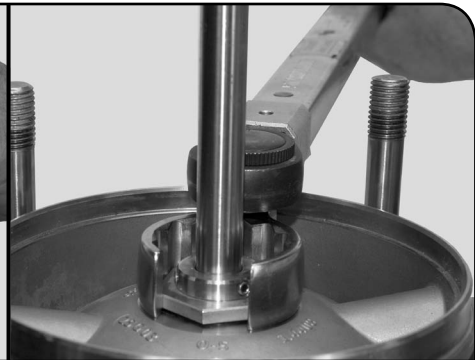

Remove the Pump Head Cover (Pos. 77a). Light blows with a rubber mallet may be required to loosen assembly.




Finish removal of Shaft Seal (Pos. 105b) from Pump Head Cover (Pos. 77a). Flip the Pump Head Cover over and go to step 27.



Remove the Sleeve O-Ring (Pos. 37) and the PTFE Stack Compression Springs (Pos. 60) from the Pump Head Cover (Pos. 77a).

To continue,  
proceed to step 28.



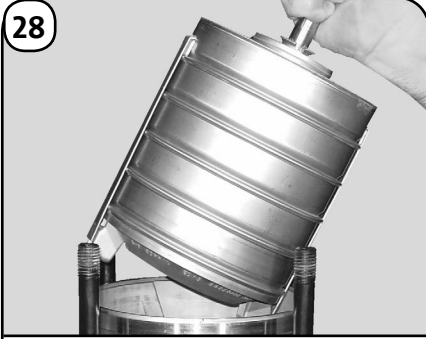

**28** Grab the shaft and lift Impeller Stack (Pos. 80) out of the pump. If it's stuck, a light blow with a rubber mallet may be needed to jolt the stack free. Go to the Reassembly section, step 12, for stack replacement instructions. If you need to disassemble the whole pump, proceed to steps 29-43.



**29** Place the Holder for Shaft (00SV0040) in a vise. With the shaft pin inserted into the shaft, place the impeller stack into the shaft holder. Tighten vise. Using a 13 mm wrench, remove the Chamber Stack Strap Bolt (Pos. 26b), Washer (Pos. 26c), and Strap (Pos. 26a).



Remove the suction inlet connector (Pos. 44).

NOTE: This may come apart in two pieces (Pos. 44a & 44b).



**31** Using a 13 mm wrench, remove the Shaft Lock Nut (Pos. 67), Lock Washer (Pos. 66) and Splined Spacer (Pos. 64c).



**32** Lift the Impeller (Pos. 49a) off the shaft. If it comes off freely, proceed to step 34. If it is stuck and cannot be removed by hand, proceed to step 33.

**33** Move the shaft into a hole of the shaft holder through which it can pass freely. Screw the Punch for Dismantling Shaft (00SV0234) onto the threaded section of shaft. Using a hammer, drive punch down past the hub of the first impeller. Noting chart instructions in step 35, remove each impeller (Pos. 49a) and Chamber with bearing (Pos. 4a) and Chamber (Pos. 4).

Repeat these steps until you get down to the last impeller. At that time, gently knock the punch down through the hub area, make sure to catch the shaft as it falls free. Go to step 36.



**34** Remove the Chamber with bearing (Pos. 4a) or Chamber (Pos. 4). If it is stuck to the rest of the stack, pry it loose by inserting a screwdriver between the chambers.

35

The dismantling procedures from this point will depend on the type of pump and number of stages it contains. Beginning on page 20, refer to the charts in the Reassembly Procedures to determine what you can expect with the pump you are working on.

Remove all the Bearing Rings (Pos. 47a) and Spacers (Pos. 64 a, c, d) you encounter while repeating steps 32-34. Continue until you remove the last impeller.

Remove the shaft and examine for damage. At that point, continue...

36



To remove Seal Ring (Pos. 45), insert a slotted screwdriver in relief slot of Seal Ring Retainer (Pos. 65) and twist or use Puller (00SV0239).

37



If the unit leaked around the Sleeve (Pos. 55), removal of the Sleeve may be required. Grip Staybolts (Pos. 26) diagonally. Using your thumbs, press against the Sleeve to release it from the Sleeve Flange Housing (Pos. 55b). Lift off sleeve. (Rocking or light upward blows with a rubber mallet may be required.)

38



Remove the four Stack Compression Springs (Pos. 60) from the Motor Stool (Pos. 2) or Pump Head (Pos. 77 or 77a).

39



Remove, Sleeve O-rings (Pos. 37) in the Motor Stool (Pos. 2) or Pump Head (Pos. 77) and the Sleeve Flange (Pos. 55b).

Continued...


40




Wear Rings (Pos. 49c) can be removed on CR-H, CRN-H 15 and 20 models. Impellers (Pos. 49a) use Puller (00SV0239) and Support (00SV0043) to work Wear Ring off of impeller.




If the Discharge Adaptor Flange (12a) has leaked, the O-ring may need replacement.  
To remove, follow the next steps after removing the system discharge piping.

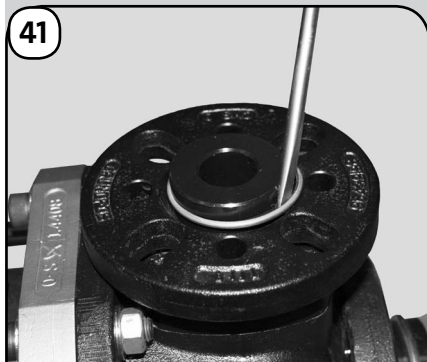

41 Push the Flange Ring (Pos. 201[a]) down, use a screwdriver to remove the Retaining Ring (Pos. 203[a]), then remove the flange ring.

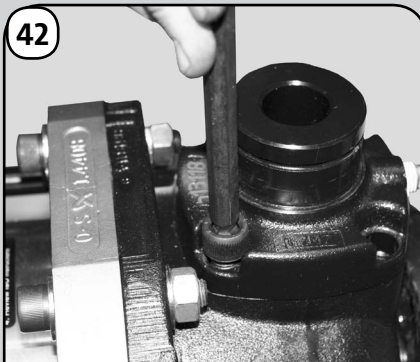




42 Remove the Flange Allen Screws (Pos. 35).

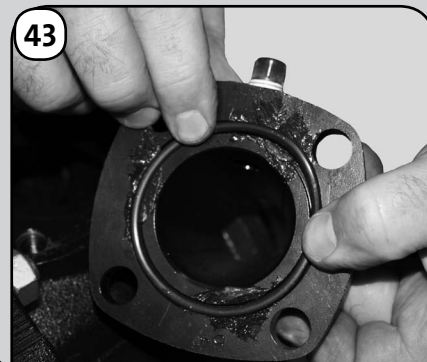

43 Remove the O-ring (Pos. 39b).

— THE PUMP IS —  
NOW COMPLETELY  
DISASSEMBLED.


## When Should A Part Be Replaced ?
   
| Part                      | Position(s)                               | Minimum Operating Condition                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                                                       |
|---------------------------|-------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| Motor Stool               | 2                                         | Excessive pitting of these castings could cause leaks. Rusted castings should have all seating areas cleaned to ensure proper seating of O-rings.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |                                                                                       |
| Suction/Discharge Chamber | 6                                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                                                                                       |
| Chambers                  | 4a, 4                                     | Same as for impellers. The maximum inside diameter for the bearing in position 4a SiC is 23.52 mm; bronze and Graflon is 22.02 mm. If a groove can be seen or felt, the chamber should be replaced.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |    |
| Neck Ring                 | 45                                        | Should be free of visible wear on the inside edges<br>Inside diameter for CRH10 = 44.01 to 45.04<br>Inside diameter for CRH15 & 20 = 59.84 to 60.02                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |    |
| Bearing ring              | 47a                                       | Minimum outside diameter SiC is 23.4 mm, TC is 21.874 mm. If a groove can be seen or felt, the bearing should be replaced.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |    |
| Impellers                 | 49                                        | Should be free from physical markings except for the guide vane welds. The eyelet or contact surface for the Neck Ring should not show any signs of wear. If worn, replace impeller on CR-H, CRN-H 10 or Wear Ring only on CR-H, CRN-H 15 and 20.<br><br>(1) <b>Cavitation</b> the implosion of vapor "bubbles" within the impeller stack. Make sure the Net Positive Suction Head Available for the pump meets the minimum Net Positive Suction Head Required for the pump when running at the required flow.<br><br>(2) <b>Improper coupling height.</b> If the coupling is not set to the proper height (see steps 34 to 36 of the Reassembly procedures) the impellers are not suspended as they should be, causing them to rub against the chambers, causing wear. |    |
| Shaft                     | 51                                        | Smooth area at the top of shaft should be free of fretting grooves. Spline should not be worn.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |  |
| Sleeve                    | 55                                        | Should not be pitted or cracked.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |                                                                                       |
| Stack Compression Spring  | 60 & 60a                                  | Should not be reused....replace.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |  |
| Spacers & Clamp           | 64, 64a, 64c, 66, 66b, 69                 | Should show no signs of gouging or wear at bottom or top.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |  |
| Lock Nut                  | 67                                        | Should not be reused....replace.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |  |
| Lock Washers              | 66                                        | Should not be reused....replace.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |  |
| O-rings                   | 37a, 38, 39b, 68, 72a, 100, 102, 109a & b | Should be soft and pliable with no visible scars. Since they are easily damaged and fairly inexpensive, it is recommended they be replaced whenever the pump is disassembled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |  |
| Shaft Seal                | 105 & 105b                                | Seals cannot be disassembled; should be replaced when repairing /rebuilding the pump.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |  |
| Bushing in Disk Plate 79a | 79b                                       | If bushing is scored, replace Bushing. If the inner bore of Disk is damaged, replace Disk.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |  |


Refer to the Parts List and Kits section for a list of material numbers and spare pare kits.



Place Sleeve O-ring (Pos. 37) into recessed area of the Motor Stool (Pos. 2) for CR-H models, or into the Pump Head (Pos. 77) for CRN-H models. Install Sleeve O-ring (Pos. 37b) into Pump Head Cover (Pos. 77a) for CR-H, CRN-H, Cool-Top®, Back-to-Back Seal, Tandem Seal models. Install O-ring into the Sleeve Flange (Pos. 55b). Note specialty O-ring (Pos. 37b) will always be installed in the "Hot" section of the pump of Cool-Top® models. Also install Stack Compression Springs (Pos. 60) for CR-H, CRN-H into Motor Stool or Pump Head Cover. **NOTE:** Cool-Top® models require two sets of four Stack Compression Springs. The PTFE will always be placed in the "Hot" section of pump to press against the stack assembly (Pos. 80).

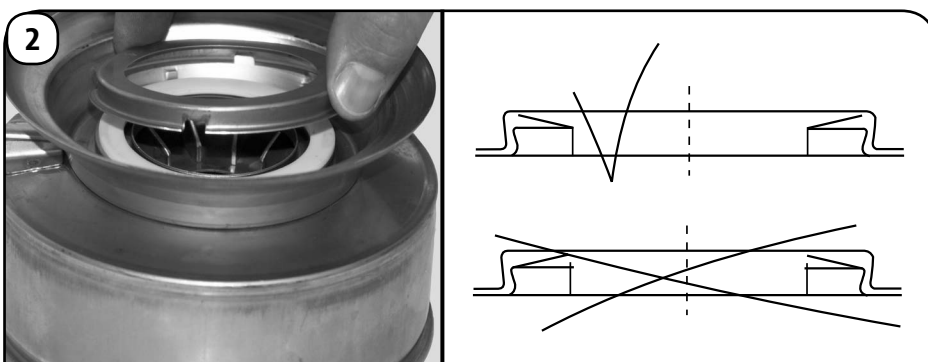


Replace any Seal Ring (Pos. 45) in the Chambers (Pos. 4, 4a, and 5a). Inner edge must face downward (see diagram). Snap Seal Ring Retainer (Pos. 65) into place. The retainer should not spin on the chamber, and the seal ring should move freely from side to side.

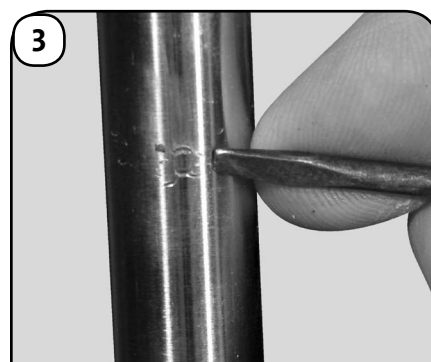

Before reusing the original Shaft (Pos. 51), use a light grit emery cloth to smooth away old set screw marks, as these can cut the O-rings in the seal assembly.



Press new Wear Ring (Pos. 49c) onto Impeller (Pos. 49a). Use new Impellers if eyelet of Impeller is worn.

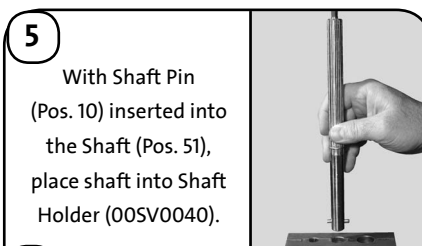

With Shaft Pin (Pos. 10) inserted into the Shaft (Pos. 51), place shaft into Shaft Holder (00SV0040).

**6** The reassembly procedures from this point will depend on the type of pump and the number of stages it contains. Refer to diagrams on pages 20-23 to determine the proper sequence of impellers (Pos. 49 or 49a), Chambers (Pos. 4, 4a), Spacers (Pos. 64 a, c, d) and Bearing Ring (Pos. 47a) needed for the pump you are working with.

Reassemble these stages in the order shown, beginning with the highest number stage and continue to the first stage. Then, continue....



Place the Clamp Spacer (Pos. 64c) onto the shaft.

8

The Lock Washers (Pos. 66) come as a set. If they become separated, it is important the washers are repositioned correctly as noted in the diagram. The tabs should interlock while the serrated edges both point outward. Place the washers onto the shaft.

9

Lubricate the threaded end of the shaft with Gardolube (00SV9995). Thread the Lock Nut (Pos. 67) onto the shaft and torque to 16.3 ft.-lbs./22 Nm. Use 13 mm Socket (00SV0091), Ratchet (00SV0295), and Torque Wrench, (00SV0269).

10

Place Suction Inlet Connector (Pos. 44a & b) onto Stack. Insert Straps (Pos. 26a) into slot in Top Chamber (Pos. 3). Place Washers (Pos. 26c) and Strap Bolt (Pos. 26b) on/into the Straps using a 13 mm Socket (00SV0091), and Torque Wrench (00SV0292), with Ratchet (00SV0295) to Torque Bolt to 11 ft.-lbs./15 Nm. Bolt should be lubricated with Gardolube.

11


Lubricate the O-ring with Dow Corning 111 or Rocol (Material Number 00RM2924) or spray soapy water on the Sleeve O-rings (Pos. 37). Then lower and press Sleeve (Pos. 55) firmly into place. This may require gentle taps with a rubber mallet. Vent sticker should line up with flat surface of sleeve flange.

12


Lower new Stack Kit (Pos. 80) into the Sleeve Flange. Make sure it seats fully into the machined recess. (Chamber Straps must be located as pictured, centered between the staybolts.)

- > **Standard CR-H, CRN-H models**  
skip to step 22
- > **Cool-Top® models**  
skip to step 13
- > **Back-to-Back Seal models**  
skip to step 17
- > **Tandem Seal models**  
skip to step 19


## Cool-Top®

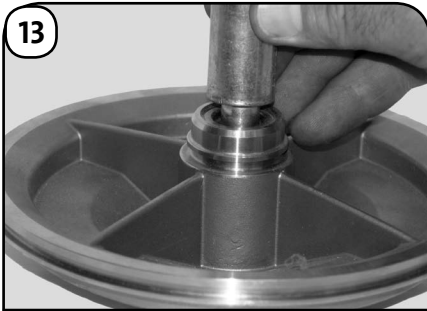

If the Bushings (Pos. 79b) are removed from Disk Plate (Pos. 79a), use a Punch (00SV2127) along with a rubber mallet to install Bushings and Retaining Washers (Pos. 79c) into Disc Plate.

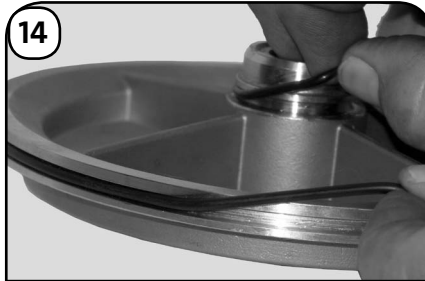

Place O-rings (Pos. 109a & 37c) onto the Disk Plate (Pos. 79a). Do not roll the O-rings; they should be stretched over and released into place to prevent cutting the material during installation into the housing. Lubricate the O-ring with Dow Corning 111 or Rocol (00RM2924) or spray soapy solution onto O-rings and housing.

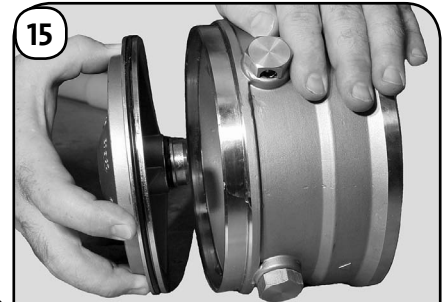

Press the plate firmly in place. Before proceeding to step 16, flip the Pump Head over; make sure the PTFE Stack "Compression Springs" (Pos. 60a) and the Sleeve O-ring (Pos. 37b) have been installed from step 1. If they have not been installed, follow the instructions in step 1 (page 11), then proceed to step 16.



Position the vent plug in line with the vent sticker and flat surface of the sleeve flange. Lower the completed Cool-Top® Pump Head Assembly (Pos. 77a) over the Shaft and seat on the Sleeve (Pos. 55). If it does not freely seat onto the Sleeve, **STOP**. Remove the Pump Head and turn over. Remove sleeve O-ring and stretch. Replace and reinstall the Pump Head onto Shaft and Sleeve. Skip to step 22.

## Back-to-Back Seal



17 Insert Inboard Seal (Pos. 105b) into the bottom side of the prepped Pump Head Cover (Pos. 77a). Using the specialty Tubular Box Spanner (00SV2107), or a 41 mm Deep Socket, tighten/torque seal the 26 ft.-lbs./35Nm.

**NOTE:** If Pump Head Cover has not yet been prepped with PTFE Stack Compression Springs (Pos. 60) and Sleeve O'Ring (Pos. 37) as previously instructed in step 1, page 11, do so now.



18 Position the vent plug in line with the vent sticker and flat surface of the sleeve flange. Use care while sliding/lowering completed Back-to-Back Pump Head Cover into place. Firmly seat over sleeve. If it does not freely seat onto sleeve... **STOP!** Remove the Pump Head Cover, turn over, remove sleeve O-ring and stretch. Reinstall/replace O-ring into Pump Head Cover, then reinstall onto Shaft and sleeve. Do not tighten the three 2.5 mm set screws at this time. This will be done in step 37. Proceed to step 22.




## Tandem Seal



19 Position the vent plug in line with the vent sticker and flat surface of the sleeve flange. Lower the completed Pump Head Assembly (Pos. 77a) over the shaft and seat on the Sleeve (Pos. 55). If it does not freely seat onto the sleeve...**STOP**. Remove the pump head and turn over. Remove sleeve O-ring and stretch. Replace and reinstall the pump head onto shaft and sleeve.




20 Slide the Inboard Seal (Pos. 105b) down the shaft and thread into the pump head. Use specialty Tubular Box Spanner (00SV2107), a 41 mm Open Ring Spanner (00SV2101) or a 41mm Deep Socket to torque the Inboard Seal to 26 ft.-lbs./35 Nm.

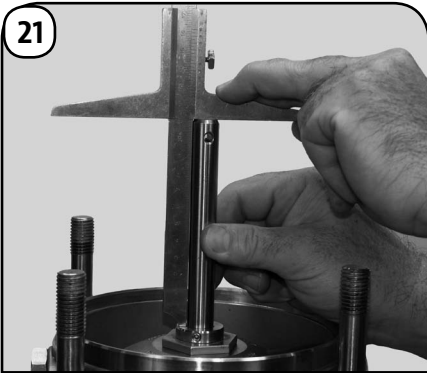

21 Push down on the collar area of the Seal, then lift Shaft to create a clearance of 123 mm from the top of the Shaft (Pos. 51) to the top of the Shaft Seal. Tighten the three 2.5 mm set screws to 2 ft.-lbs./2.5 Nm. Proceed to step 22.

OR

### Alternative to Step 21

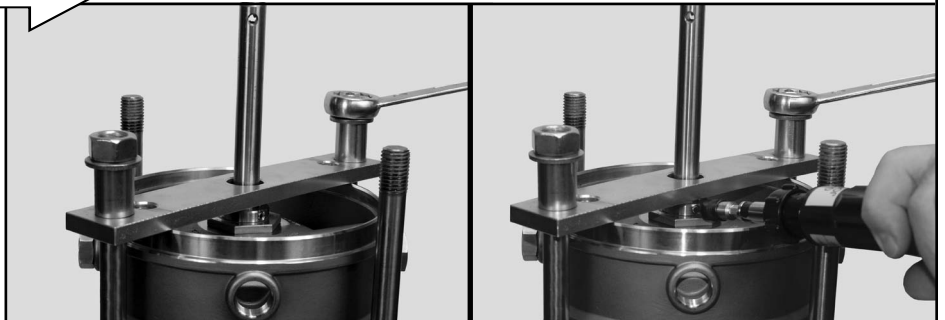

An alternative to step 21 is when the special tool (00SV2078) and two 27.5 mm Spacers (96491537) are used with two Staybolt Nuts and Washers.


Place tool over Staybolts and seat against Pump Head Assembly (Pos. 77a). Slide 27 mm Spacers down Staybolts.

Place Washers and Nuts onto Staybolts and tighten diagonally to:

CR-H: 59 ft.-lbs./80 Nm

CRN-H: 74 ft.-lbs./100 Nm


Push Shaft down, then tighten the three 2.5 mm Set Screws to 2 ft.-lbs./2.5 Nm. Remove Staybolt Nuts/Washers, 27 mm Spacers, and tool (00SV2078). Proceed to step 22.

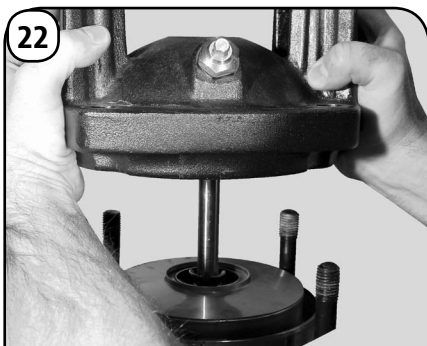

Lubricate the O-ring with Dow Corning 111 or Rocol or spray soapy water on the Sleeve O-rings (Pos. 37) in the Motor Stool for CR-H or CRN-H Pump Head. Position the vent plug in line with the vent sticker and flat surface of the sleeve flange. Then lower and fully press in place.



Slide the cartridge Support Foot (Pos. 90c) over the staybolts opposite the vent plug. Place the Washers (Pos. 66a) over the Staybolts (Pos. 26). Then, lubricate with Gardolube (00SV9995), or Thread-Eze (96611372). Place the 24 mm Staybolt Nuts (Pos. 36) onto staybolts and loosely tighten. **Do not torque at this time** (torque at step 31).

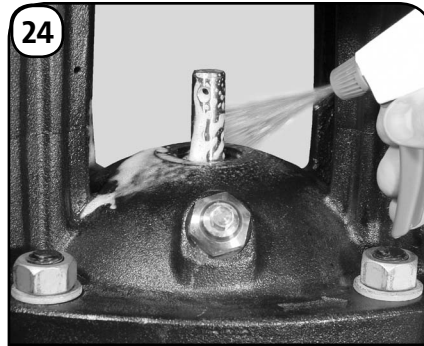

Spray soapy water onto the Seal O-ring Seating Surface of the Pump Head and the Shaft (Pos. 51). (If reusing original Shaft, be sure to use Emery tool provided with Seal Kit to remove any burrs on the Shaft. Then, spray with soapy water.)



Pushing down on Shaft Seal collar (do not push down on Hex Nut), lower the new Shaft Seal (Pos. 105) over the Shaft. Use the specialty Tubular Spanner (00SV2107), a 41 mm Open Ring Spanner (00SV2101), or a 41 mm Deep Socket to tighten to 26 ft.-lbs./35 Nm.


Do not tighten the three set screws (Pos. 113) at this time, this will be done in step 33.




Place the first Coupling Guard with the support bracket. Install screws (pos. 7a) using a torque screwdriver with a slotted or Torx® tip T20, torque to 1.5 ft.-lbs./2 Nm. The cartridge assembly is now ready to take back to where the suction discharge volute is located.



If this was not done earlier, remove the old O-ring and clean the groove. Next, in four equally spaced areas, place a liberal amount of Dow Corning 111 or Rocol onto the machined groove of the Suction/Discharge Base (Pos. 6). Fit the O-ring (Pos. 72a) into the groove, ensuring it is fully seated and does not move out of position.

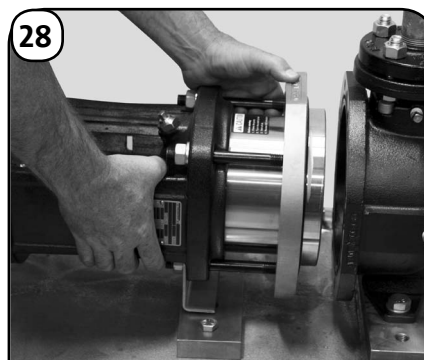

Align the cartridge and slide it into the suction/discharge base, making sure that the O-ring from step 27 is still in place. Also, make sure the sleeve flange flat surface, venting label, and vent plug are facing upward.

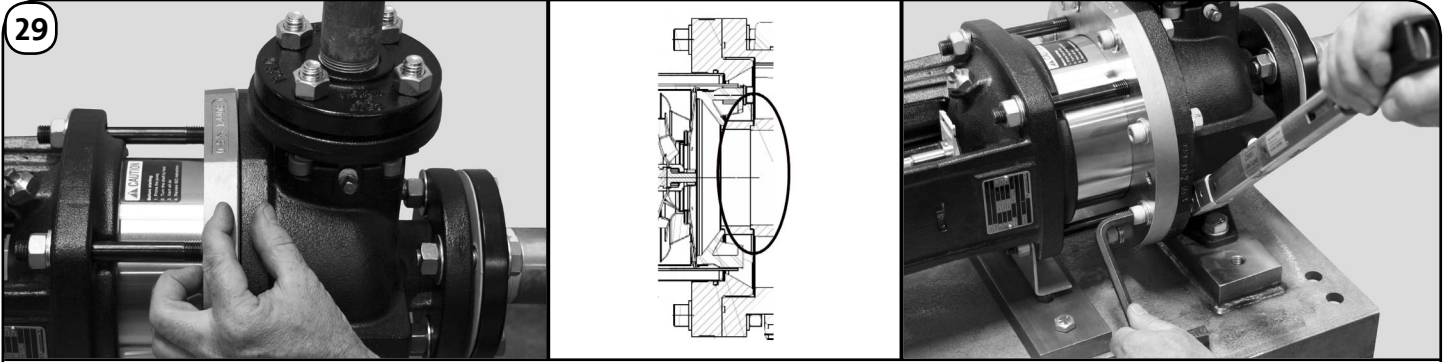


Before installing the Screws (Pos. 56c), Washers (Pos. 56d), and Nuts (Pos. 56e) into the Sleeve Flange (Pos. 55b) ensure the flange is fully seated; there should not be any gap between the flange and the suction discharge base. If there is a gap, either the o-ring from step 27 has moved out of place and is pinched, or the flange is not properly engaged into the machined recess/register in the base (see the diagram above); repair before proceeding. If properly seated, apply Gardolube or Thread-eze to the screws, then torque diagonally to 55 ft.-lbs./75 Nm.



Slide the motor assembly toward the Motor Stool and/or Spacer (Pos. 1), then install and tighten Motor Bolts (Pos. 28) diagonally to the proper torque.

17 ft.-lbs./23 Nm for UNC 3/8" bolts (9/16" Head), and  
30 ft.-lbs./40 Nm for UNC 1/2" bolts (3/4" Head)

If the bolt holes do not align, slightly lifting and twisting the cartridge by the motor stool may be required to allow the motor stool register and holes to fully align/seal.

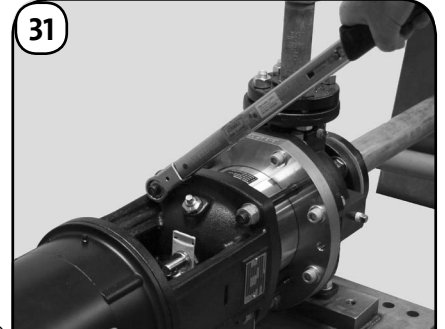


Torque the staybolt nuts diagonally to:


CR-H: 59 ft.-lbs./80 Nm  
CRN-H: 74 ft.-lbs./100 Nm



Tighten the Slide Rail Screws (Pos. 90d) connecting the motor to the base.

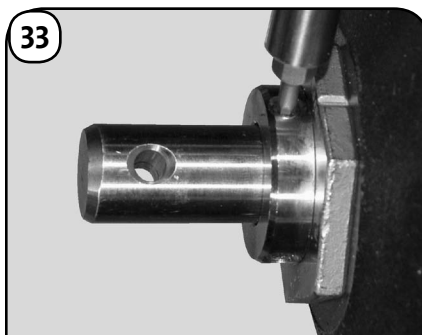

Push the Shaft all the way down (for Tandem Seal models you must continue to apply downward force), then tighten the three 2.5 mm Shaft Seal Securing Allen Screws torque to 2 ft.-lbs./2.5 Nm.

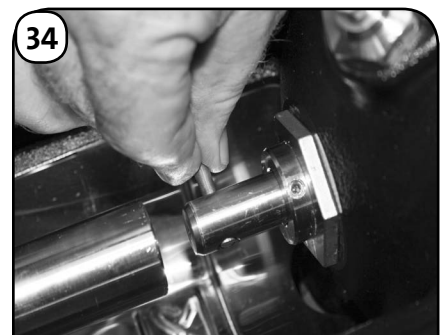

Place the Shaft Pin (Pos. 10) into the shaft (Pos. 51).


35



Install the Coupling Halves (Pos. 10a). Apply Gardolube, Thread-eze, or spray a light machinery oil onto the Coupling Bolts (Pos. 9). Install loosely into the Couplings.

36

Standard Units and Cool Top®

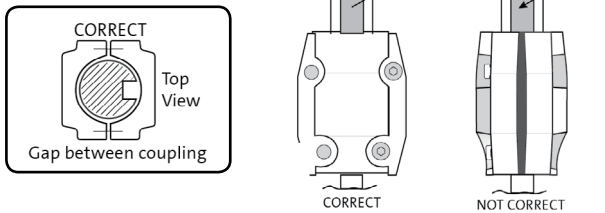


Using a screwdriver, lift the Shaft upward. Insert Shaft Seal Spacer tool between Shaft Seal Collar and Hex Nut. Remove the screwdriver and tighten and torque the Coupling Bolts.

5 mm - M6 to 10 ft.-lbs./13 Nm  
6 mm - M8 to 23 ft.-lbs./31 Nm  
8 mm - M10 to 46 ft.-lbs./62 Nm

Ensure the gap between the two Coupling Halves are even (see Diagram).

37


Back-to-Back Seal

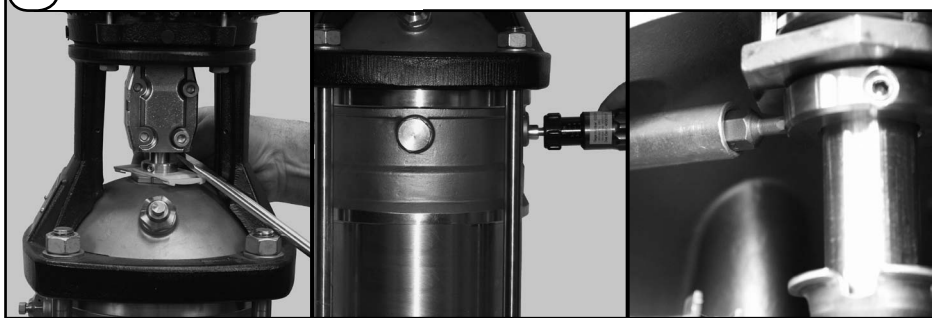

Using a screwdriver, lift the Shaft upward. Insert **two** of the Spacer tools between Shaft Seal Collar and Hex Nut Outer Seal. Next, insert a 2.5 mm allen wrench through one of the lower vent port holes and torque the lower inboard seal securing screws to 2.0 ft.-lbs./2.5 Nm. Remove allen wrench and replace plugs (Pos. 23a) into the Pump Head Cover (Pos. 77a). Now remove **one** of the Spacer tools. From the Outer Seal, push the Shaft downward, ensuring the Seal Collar is resting on the tool. Then, tighten and torque the Coupling bolts to values in step 36.

38

Tandem Seal

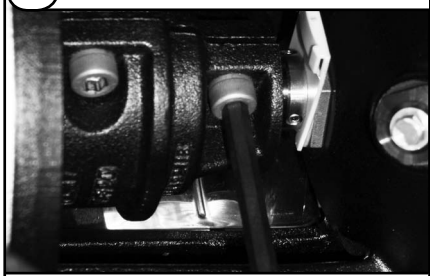


Spring tension from the seals may have already lifted the Shaft upward. If not, lift the Shaft upward. At this time insert the Shaft Seal Spacer tool. Remove the screwdriver. Ensure the Shaft has moved downward and shaft Seal Collar is resting on the tool. Tighten and torque the Coupling bolts to values in step 36.

39


Remove Spacer Tool, then spin the shaft by hand; proceed only if the shaft spins freely.

If the shaft **does not** spin freely:  
Stop and start over, inspecting the components for any cause of binding.

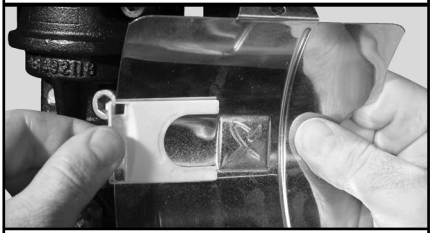

Place Shaft Seal Spacer tool(s) on to Coupling Guard(s).


40

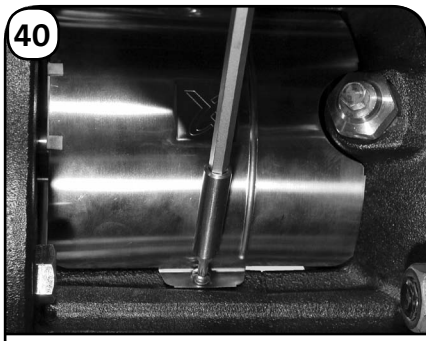

Install the last Coupling Guard (Pos. 7) and the Screws (Pos. 7a). Using a Torque Screwdriver, with a slotted or a TORX® tip T20, torque to 1.5 ft.-lbs./2 Nm.




If the Discharge Adaptor Flange and O-ring have been removed, replace following the next steps:

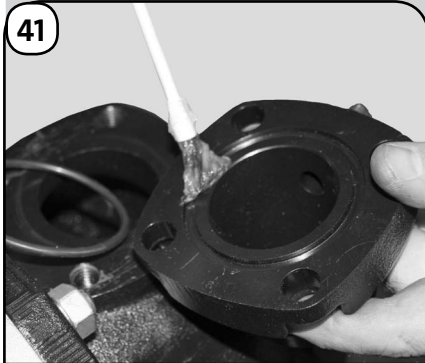


41

Apply Dow Corning 111 or Rocol to groove in Flange (Pos. 12a).

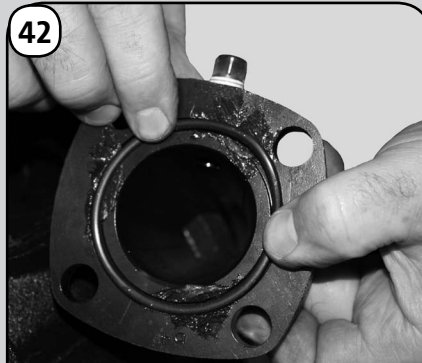


42

Place and seat O-ring (Pos. 39b).

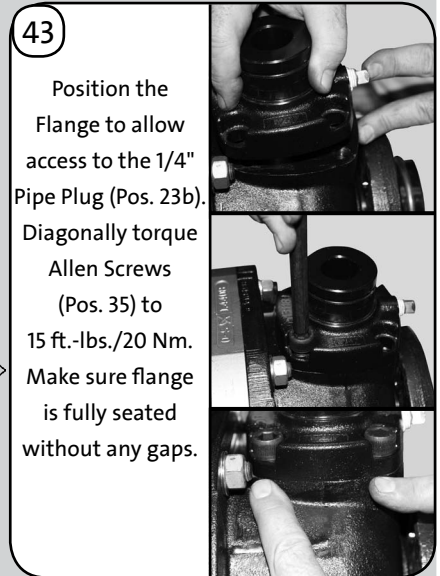

43

Position the Flange to allow access to the 1/4" Pipe Plug (Pos. 23b). Diagonally torque Allen Screws (Pos. 35) to 15 ft.-lbs./20 Nm. Make sure flange is fully seated without any gaps.

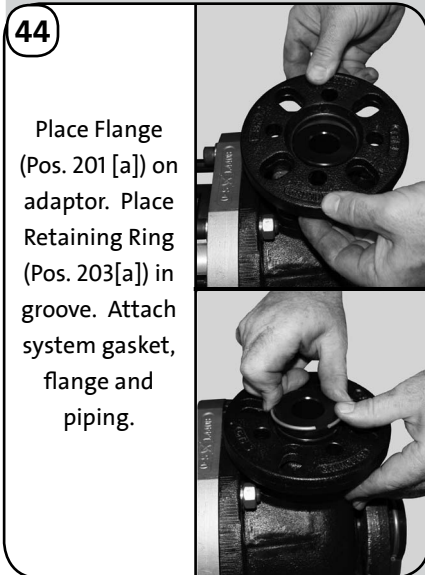

44

Place Flange (Pos. 201 [a]) on adaptor. Place Retaining Ring (Pos. 203[a]) in groove. Attach system gasket, flange and piping.

— THE PUMP IS —  
NOW COMPLETELY  
REASSEMBLED.

Order of Stage Assembly – Models CR-H, CRN-H 10

**Legend**

**A**

67 Lock Nut

66 Star Washer

64c Clamp

**Part Combination A**

**B**

49 Impeller

64d Spacing Pipe

47a Bearing Ring

4a Chamber with Bearing

64a Spacing Pipe

**Part Combination B**

**C**

49 Impeller

4 Chamber - CPL

64 Spacing Pipe

**Part Combination C**

**D**

49 Impeller

3 Top Chamber with Guide Vanes

69 Spacing Pipe

61 Stop Spacer

**Part Combination D**

**E (\*see note below)**

3a Top Chamber without Guide Vanes

69a Spacing Pipe

61 Stop Spacer

**Part Combination E**

| Number of impellers |   |   |   |   |   |   |   |   |    |    |    |    |    |    |    |    | Stages |
|---------------------|---|---|---|---|---|---|---|---|----|----|----|----|----|----|----|----|--------|
| 1                   | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 12 | 14 | 16 | 17 | 18 | 20 | 22 |        |
| X                   | X | X | X | X | X | X | X | X | X  | X  | X  | X  | X  | X  | X  | X  |        |
| A                   | A | A | A | A | A | A | A | A | A  | A  | A  | A  | A  | A  | A  | A  |        |
| B                   | B | B | B | B | B | B | B | B | B  | B  | B  | B  | B  | B  | B  | B  | 1      |
| E                   | D | C | C | C | C | C | C | C | C  | C  | C  | C  | C  | C  | C  | C  | 2      |
|                     |   | D | C | C | C | C | C | C | C  | C  | C  | C  | C  | C  | C  | C  | 3      |
|                     |   |   | D | C | C | C | C | C | C  | C  | C  | C  | C  | C  | C  | C  | 4      |
|                     |   |   |   | D | C | C | C | C | C  | C  | C  | C  | C  | C  | C  | C  | 5      |
|                     |   |   |   |   | D | C | C | C | B  | C  | C  | C  | C  | C  | C  | C  | 6      |
|                     |   |   |   |   |   | D | C | C | C  | B  | C  | C  | C  | C  | C  | C  | 7      |
|                     |   |   |   |   |   |   | D | C | C  | C  | C  | C  | C  | C  | C  | C  | 8      |
|                     |   |   |   |   |   |   |   | D | C  | C  | C  | C  | C  | C  | C  | C  | 9      |
|                     |   |   |   |   |   |   |   |   | D  | C  | C  | C  | C  | C  | C  | C  | 10     |
|                     |   |   |   |   |   |   |   |   |    | D  | C  | B  | C  | C  | C  | C  | 11     |
|                     |   |   |   |   |   |   |   |   |    |    | D  | C  | C  | C  | C  | C  | 12     |
|                     |   |   |   |   |   |   |   |   |    |    |    | D  | C  | C  | C  | C  | 13     |
|                     |   |   |   |   |   |   |   |   |    |    |    |    | D  | C  | C  | C  | 14     |
|                     |   |   |   |   |   |   |   |   |    |    |    |    |    | D  | C  | C  | 15     |
|                     |   |   |   |   |   |   |   |   |    |    |    |    |    |    | D  | C  | 16     |
|                     |   |   |   |   |   |   |   |   |    |    |    |    |    |    |    | D  | 17     |
|                     |   |   |   |   |   |   |   |   |    |    |    |    |    |    |    |    | 18     |
|                     |   |   |   |   |   |   |   |   |    |    |    |    |    |    |    |    | 19     |
|                     |   |   |   |   |   |   |   |   |    |    |    |    |    |    |    |    | 20     |
|                     |   |   |   |   |   |   |   |   |    |    |    |    |    |    |    |    | 21     |
|                     |   |   |   |   |   |   |   |   |    |    |    |    |    |    |    |    | 22     |

**End Combination X**

26b Strap Bolt

26c Strap Washer

44b Lower Inlet Part

26a Strap

44a Upper Inlet part with Retainer & Seal Ring



**NOTES:**

1. If an impeller is to be permanently removed (pump destaged), the thickness of the impeller back plate/hub area must be compensated for. Use a longer spacer or combination of spacers that equal the thickness of back plate/hub area material.


\*Substitute E for D when destaging.

2. Since proper reassembly of the impeller stages must be done "upside down," this chart has been arranged that way for your convenience. Impeller eyelet (opening) faces upward away from vise.

# Order of Stage Assembly – Models CR-H, CRN-H 10 (Low NPSH)

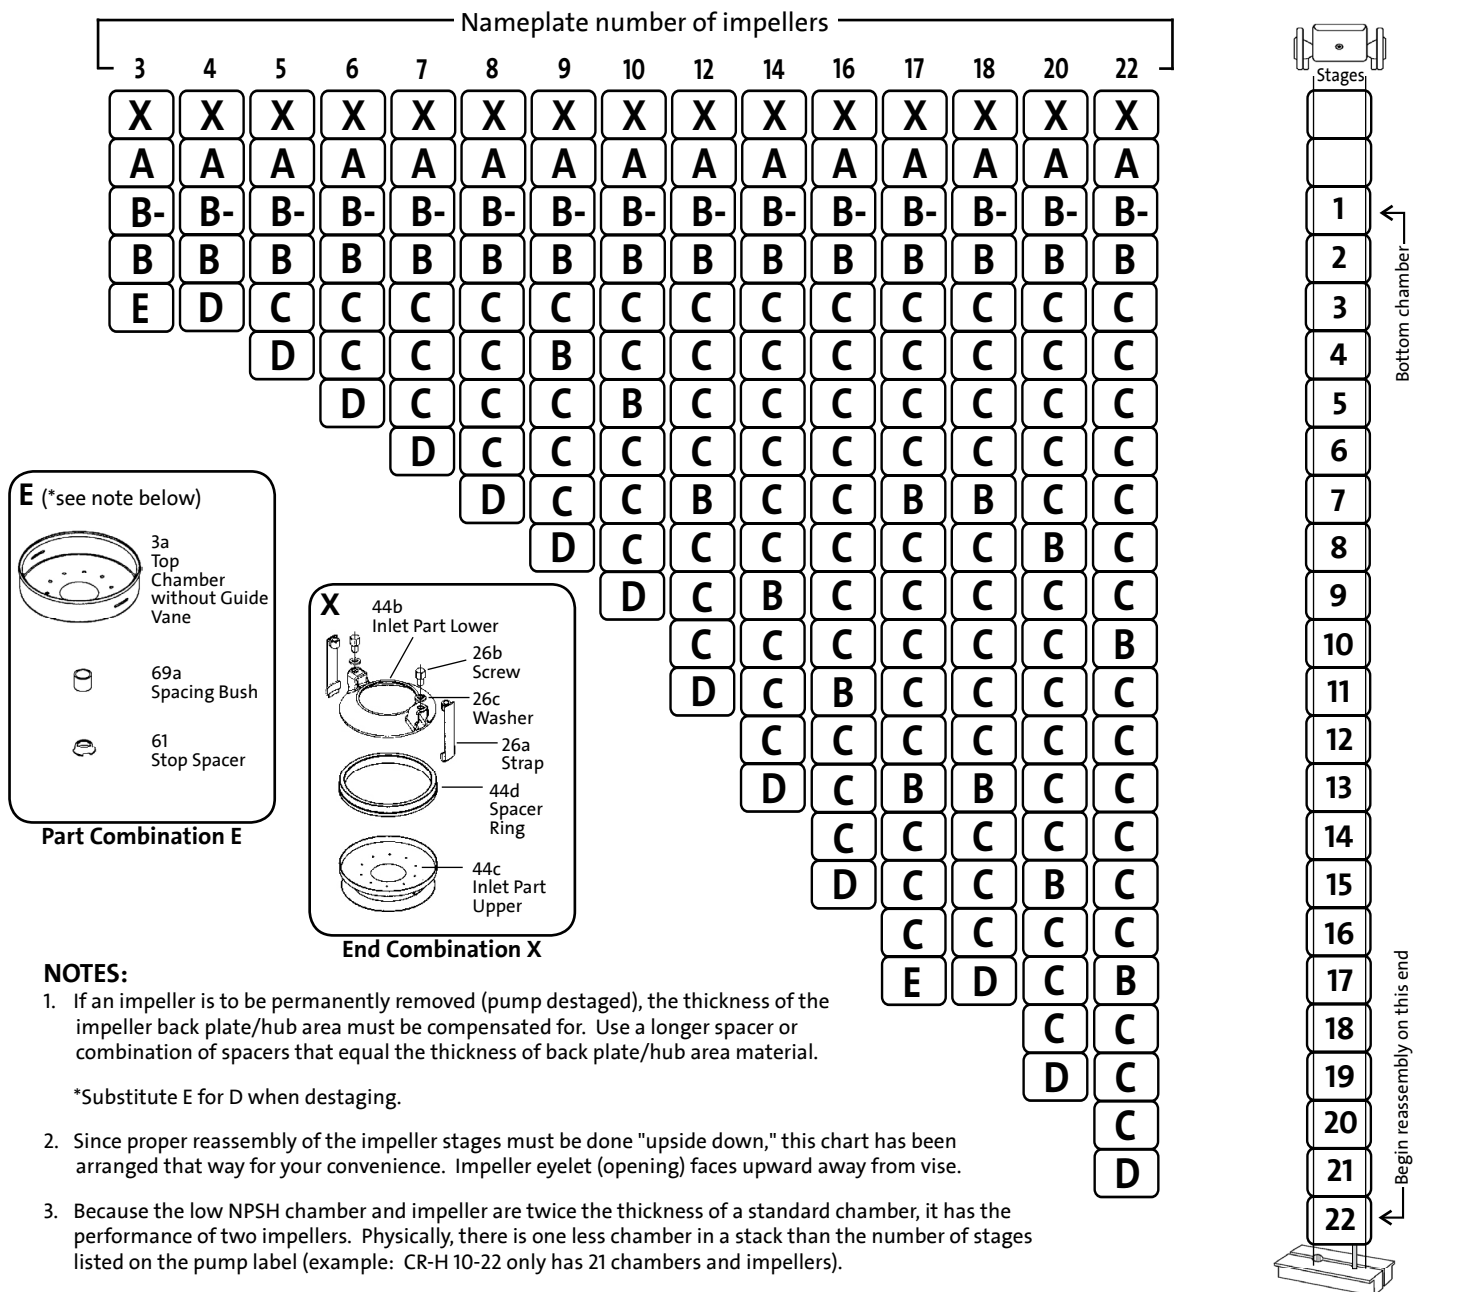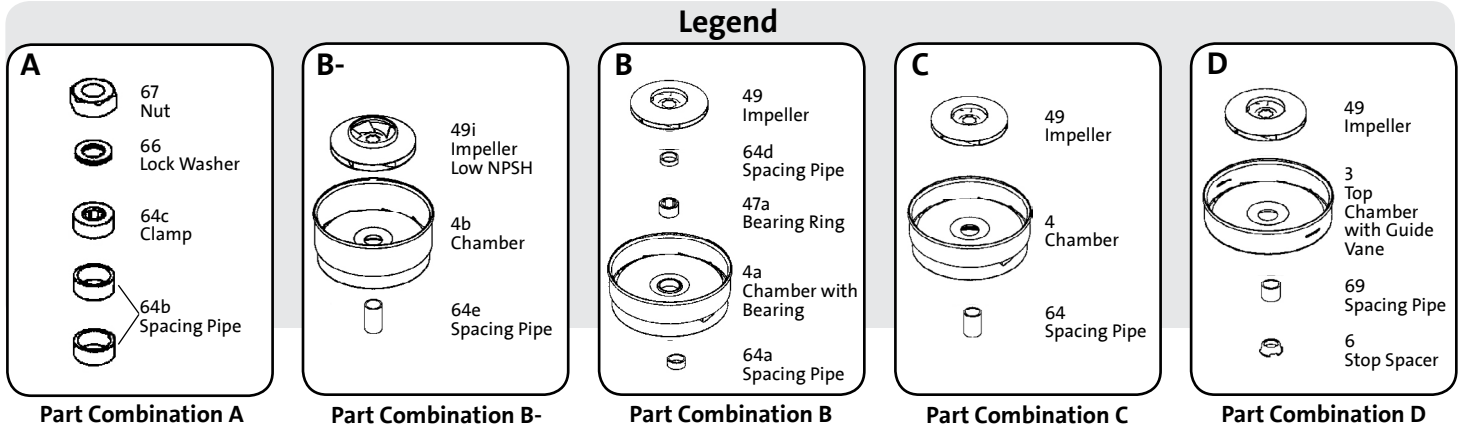



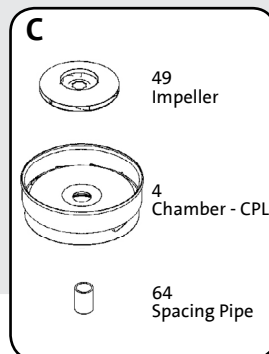

### Part Combination C

Stages

Bottom chamber

1

2

3

4

5

6

7

8

9

10

11

12

13


14

15


16

17

Begin reassembly on this end

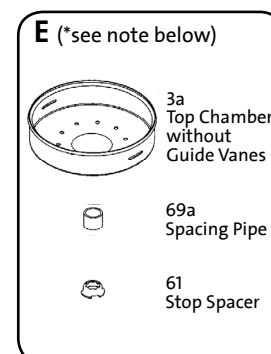

### Part Combination E

 

1. If an impeller is to be permanently removed (pump destaged), the thickness of the impeller back plate/hub area must be compensated for. Use a longer spacer or combination of spacers that equal the thickness of back plate/hub area material.

2. Since proper reassembly of the impeller stages must be done "upside down," this chart has been arranged that way for your convenience. Impeller eyelet (opening) faces upward away from vise.

# Order of Stage Assembly – Models CR-H, CRN-H 15 & 20 (low NPSH)

**A**

- 67 Nut
- 66 Lock Washer
- 64c Clamp
- 64e Spacing Pipe
- 64b Spacing Pipe
- 47a Bearing Ring, HM
- 64e Spacing Pipe

**Part Combination A**

**A-**

- 67 Nut
- 66 Lock Washer
- 64c Clamp
- 64e Spacing Pipe
- 47a Bearing Ring, HM
- 64e Spacing Pipe

**Part Combination A-**

**A+**

- 67 Nut
- 66 Lock Washer
- 64c Clamp
- 64e Spacing Pipe
- 64b Spacing Pipe
- 47a Bearing Ring, HM
- 64e Spacing Pipe

**Part Combination A+**

**B-**

- 49i Impeller Low NPSH
- 64d Spacing Pipe
- 47a Bearing Ring, SiC
- 4a Chamber with Bearing
- 64a Spacing Pipe

**Part Combination B-**

**B**

- 49 Impeller
- 64d Spacing Pipe
- 47a Bearing Ring, SiC
- 4a Chamber with Bearing
- 64a Spacing Pipe

**Part Combination B**

| Number of impellers |    |    |    |    |    |    |    |    |    |    |    |    |  | Stages |
|---------------------|----|----|----|----|----|----|----|----|----|----|----|----|--|--------|
| 1                   | 2  | 3  | 4  | 5  | 6  | 7  | 8  | 9  | 10 | 12 | 14 | 17 |  |        |
| X                   | X  | X  | X  | X  | X  | X  | X  | X  | X  | X  | X  | X  |  | 1      |
| A-                  | A- | A+ | A- | A+ | A- | A+ | A  | A  | A- | A- | A- | A  |  | 2      |
| B-                  | B- | B- | B- | B- | B- | B- | B- | B- | B- | B- | B- | B- |  | 3      |
| E                   | D  |    | C  | C  | C  | C  | C  | C  | C  | C  | C  | C  |  | 4      |
|                     |    | D  | C  | C  | C  | C  | C  | C  | C  | C  | C  | C  |  | 5      |
|                     |    |    | D  | C  | C  | B  | C  | C  | C  | C  | C  | C  |  | 6      |
|                     |    |    |    | D  | C  | C  | B  | C  | C  | B  | C  | C  |  | 7      |
|                     |    |    |    |    | D  | C  | C  | B  | C  | C  | C  | C  |  | 8      |
|                     |    |    |    |    |    | D  | C  | C  | B  | C  | C  | B  |  | 9      |
|                     |    |    |    |    |    |    | D  | C  | C  | C  | C  | C  |  | 10     |
|                     |    |    |    |    |    |    |    | D  | C  | B  | C  | C  |  | 11     |
|                     |    |    |    |    |    |    |    |    | D  | C  | C  | C  |  | 12     |
|                     |    |    |    |    |    |    |    |    |    | D  | C  | C  |  | 13     |
|                     |    |    |    |    |    |    |    |    |    |    | D  | B  |  | 14     |
|                     |    |    |    |    |    |    |    |    |    |    |    | C  |  | 15     |
|                     |    |    |    |    |    |    |    |    |    |    |    | C  |  | 16     |
|                     |    |    |    |    |    |    |    |    |    |    |    | D  |  | 17     |

Bottom chamber

Begin reassembly on this end

**D**

- 49 Impeller
- 3 Top Chamber with Guide Vanes
- 69 Spacing Pipe
- 61 Stop Spacer

**Part Combination D**

**E (\*see note below)**

- 3a Top Chamber without Guide Vanes
- 69a Spacing Pipe
- 61 Stop Spacer

**Part Combination E**

**X**

- 26b Strap Bolt
- 26c Strap Washer
- 44b Lower Inlet Part
- 26a Strap
- 44a Upper Inlet part with Retainer & Seal Ring

**End Combination X**

## NOTES:

1. If an impeller is to be permanently removed (pump destaged), the thickness of the impeller back plate/hub area must be compensated for. Use a longer spacer or combination of spacers that equal the thickness of back plate/hub area material.

\*Substitute E for D when destaging.

2. Since proper reassembly of the impeller stages must be done "upside down," this chart has been arranged that way for your convenience. Impeller eyelet (opening) faces upward away from vise.

3. HM = Hard Metal - Tungsten Carbide

4. SiC = Sintered Silicon Carbide

L-SM-DR-102 0509

The name Grundfos, the Grundfos logo, and **be think innovate** are registered trademarks owned by Grundfos Holding A/S, Denmark. All rights reserved worldwide. © Copyright Grundfos Holding A/S

**GRUNDFOS Pumps Corporation**  
17100 W. 118th Terrace  
Olathe, Kansas 66062  
Phone: 913.227.3400  
Fax: 913.227.3500  
[www.grundfos.us](http://www.grundfos.us)

**GRUNDFOS Canada, Inc.**  
2941 Brighton Road  
Oakville, Ontario L6H 6C9 Canada  
Phone: 905.829.9533  
Fax: 905.829.9512

**Bombas GRUNDFOS de Mexico S.A. de C.V.**  
Boulevard TLC No. 15  
Parque Industrial Stiva Aeropuerto  
Apodaca, N.L. Mexico 66600  
Phone: 52.81.8144.4000  
Fax: 52.81.8144.4010

**GRUNDFOS** 