

## 554-7 Wireless Remote Transmitter & Receiver Kit 554-8 Wireless Transmitter Button

EFFECTIVE: December 19, 2016

SUPERSEDES: September 15, 2015

Plant I.D. 001-4225

### Model #: 554-7 Wireless Remote Transmitter & Receiver Kit

Kit Includes: 1 Remote Receiver  
3 Wire Nuts  
1 Remote Transmitter Button



### INSTALLATION INSTRUCTIONS

1. The remote receiver is the small black rectangular box with three protruding wires (white, black, green). Connect the white, black, and green wires from the remote receiver directly to the corresponding white, black, and green wires on the TacoGenie control box by twisting each same colored wire together with the wire nuts provided.
2. When installing the remote receiver under a sink, mount the remote receiver toward the front of the cabinet (transmitter range is about 70'). If the transmitter button will activate the pump from a short distance, but not from further away, the receiver may need to be relocated for better reception. Strapping the receiver to the front of the drain trap facing outward will optimize reception.
3. **NOTE: The remote transmitter button included with the remote is synced for use. It does not need programming.**
4. For additional Wireless Remote Transmitter Buttons, use model 554-8.


## Model #: 554-8 Wireless Remote Transmitter Button

Includes: 1 Remote Transmitter Button


**NOTE:** The remote transmitter button is provided with a “coin” type lithium battery installed in the remote transmitter and is ready for programming. 554-8 Remote Transmitters purchased separately must be synced with the remote receiver.

### PROGRAMMING INSTRUCTIONS

1. Unplug the TacoGenie circulator from the 115V wall outlet.
2. Remove the remote receiver cover (rectangular black box wired to the TacoGenie circulator) separating the top cover from the base plate. A small straight tip screw driver may be used if necessary. Lift the control board out from the case.

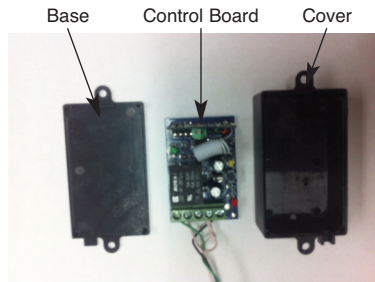

3. Plug the TacoGenie circulator back into the 115V wall outlet. Circulator will automatically turn on and operate until hot water is detected at the TacoGenie temperature sensor.
4. A red LED will light on the remote receiver electronic control board once the TacoGenie is plugged into the wall outlet. The remote receiver must be powered with the red LED on to properly sync remote receivers.
5. Next to the red LED is a small black button. Press and hold down the black button and a yellow LED on the other side of the black button will light. While the yellow LED is on, press and hold the 554-8 Remote Transmitter Button for 3 seconds. Release the transmitter button, then release the remote receiver button and the yellow LED will turn off. The Remote Transmitter Button is now synced and ready for operation.

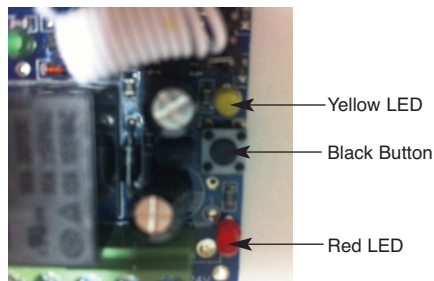

6. Place the control board back into the remote receiver cover and reinstall the cover by aligning the four plastic posts on the base with the four holes in the cover. Make sure the white wire is properly inserted into the cover cutout. Gently snap the cover and base together.

# LIMITED WARRANTY STATEMENT

Taco, Inc. will repair or replace without charge (at the company's option) any Taco product which is proven defective under normal use within three (3) years from the date of manufacture.

In order to obtain service under this warranty, it is the responsibility of the purchaser to promptly notify the local Taco stocking distributor or Taco in writing and promptly deliver the subject product or part, delivery prepaid, to the stocking distributor. For assistance on warranty returns, the purchaser may either contact the local Taco stocking distributor or Taco. If the subject product or part contains no defect as covered in this warranty, the purchaser will be billed for parts and labor charges in effect at time of factory examination and repair.

Any Taco product or part not installed or operated in conformity with Taco instructions or which has been subject to misuse, misapplication, the addition of petroleum-based fluids or certain chemical additives to the systems, or other abuse, will not be covered by this warranty.

If in doubt as to whether a particular substance is suitable for use with a Taco product or part, or for any application restrictions, consult the applicable Taco instruction sheets or contact Taco at (401-942-8000).

Taco reserves the right to provide replacement products and parts which are substantially similar in design and functionally equivalent to the defective product or part. Taco reserves the right to make changes in details of design, construction, or arrangement of materials of its products without notification.

**TACO OFFERS THIS WARRANTY IN LIEU OF ALL OTHER EXPRESS WARRANTIES. ANY WARRANTY IMPLIED BY LAW INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS IS IN EFFECT ONLY FOR THE DURATION OF THE EXPRESS WARRANTY SET FORTH IN THE FIRST PARAGRAPH ABOVE.**

**THE ABOVE WARRANTIES ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR STATUTORY, OR ANY OTHER WARRANTY OBLIGATION ON THE PART OF TACO.**

**TACO WILL NOT BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF ITS PRODUCTS OR ANY INCIDENTAL COSTS OF REMOVING OR REPLACING DEFECTIVE PRODUCTS.**

This warranty gives the purchaser specific rights, and the purchaser may have other rights which vary from state to state. Some states do not allow limitations on how long an implied warranty lasts or on the exclusion of incidental or consequential damages, so these limitations or exclusions may not apply to you.



Taco, Inc., 1160 Cranston Street, Cranston, RI 02920 | Tel: (401) 942-8000 | FAX: (401) 942-2360

Taco (Canada), Ltd., 8450 Lawson Road, Suite #3, Milton, Ontario L9T 0J8 | Tel: (905) 564-9422 | FAX: (905) 564-9436

Visit our web site: [www.TacoComfort.com](http://www.TacoComfort.com) | Printed in USA | ©2016 Taco, Inc.

