

MS, MMS

Safety instructions and other important information



MS, MMS
Installation and operating instructions
Other languages
<http://net.grundfos.com/qr/i/98599768>



SP
Installation and operating instructions
Other languages
<http://net.grundfos.com/qr/i/98074911>

be
think
innovate

GRUNDFOS

MS, MMS

English (GB)	
Safety instructions.	5
Български (BG)	
Инструкции за безопасност	10
Čeština (CZ)	
Bezpečnostní pokyny	16
Deutsch (DE)	
Sicherheitshinweise	22
Dansk (DK)	
Sikkerhedsanvisninger.	28
Eesti (EE)	
Ohutusjuhised	34
Español (ES)	
Instrucciones de seguridad.	39
Suomi (FI)	
Turvallisuusohjeet.	45
Français (FR)	
Consignes de sécurité	51
Ελληνικά (GR)	
Οδηγίες ασφαλείας	57
Hrvatski (HR)	
Sigurnosne upute	63
Magyar (HU)	
Biztonsági utasítások	69
Italiano (IT)	
Istruzioni di sicurezza	75
Lietuviškai (LT)	
Saugos nurodymai	81
Latviešu (LV)	
Drošības instrukcijas	87
Nederlands (NL)	
Veiligheidsinstructies.	93
Polski (PL)	
Zasady bezpieczeństwa.	99

Português (PT)	
Instruções de segurança	105
Română (RO)	
Instrucțiuni de siguranță	111
Srpski (RS)	
Sigurnosna uputstva	117
Русский (RU)	
Указания по технике безопасности	123
Svenska (SE)	
Säkerhetsinstruktioner	129
Slovensko (SI)	
Varnostna navodila	135
Slovenčina (SK)	
Bezpečnostné pokyny	141
Türkçe (TR)	
Güvenlik talimatları	147
Українська (UA)	
Інструкція з техніки безпеки	153
中文 (CN)	
安全指导	159
(AR) العربية	
تعليمات السلامة	164
Declaration of conformity	169
Declaration of conformity	172
Declaration of conformity	173

English (GB) Safety instructions

■ Original safety instructions

These safety instructions give a quick overview of the safety precautions to be taken in connection with any work on this product.

Observe these safety instructions during handling, installation, operation, maintenance, service and repair of this product.

These safety instructions are a supplementary document, and all safety instructions will appear again in the relevant sections of the installation and operating instructions.

Keep these safety instructions at the installation site for future reference.



Read this document before you install the product. Installation and operation must comply with local regulations and accepted codes of good practice.

Unpacking



Be careful not to damage the motor cable with sharp tools when unpacking the motor.



The separate nameplate supplied with the motor is intended for being visible in electric panel during installation of the pump set.

Storage and handling



If an MMS motor is stored, the shaft must be turned at least once a month. If a motor is stored for more than one year before installation, the rotating parts of the motor must be dismantled and checked before use.

WARNING Crushing of feet

Death or serious personal injury

- Stack the pumps with the biggest at the bottom, and do not stack above 1 m.
- Use lifting equipment approved for the weight of the product.
- Wear personal protective equipment.



WARNING

Crushing of hands

Death or serious personal injury



- Stack the pumps with the biggest at the bottom, and do not stack above 1 m.
- Use lifting equipment approved for the weight of the product.
- Wear personal protective equipment.

Frost protection



Special motors factory-filled with demineralised water must be stored at a temperature above the freezing point or emptied before storage.

Installation requirements

DANGER

Electric shock

Death or serious personal injury



- Switch off the power supply before starting any work on the product.
- Make sure that the power supply cannot be accidentally switched on.

WARNING

Crushing of feet

Death or serious personal injury



- During handling, use lifting equipment which is approved for the weight of the product.
- Wear personal protective equipment

WARNING

Crushing of hands

Death or serious personal injury



- During handling, use lifting equipment which is approved for the weight of the product.
- Wear personal protective equipment

Checking the motor liquid



Check the level of motor liquid and refill if required. Use tap water



If frost protection is required, a special Grundfos liquid must be used to refill the motor.

Grundfos MMS6, MMS8000, MMS10000 and MMS12000 submersible motors



Before fitting the motor to a pump after a long period of storage, lubricate the shaft seal by adding a few drops of water and turning the shaft.

Motors suitable for horizontal installation

CAUTION Hot surface

Minor or moderate personal injury



- If the pump is used for pumping hot liquids (40 to 60 °C), make sure that people cannot come into contact with the pump and the installation, e.g. by installing a guard.



During operation, the motor must always be completely submerged in the liquid. Make sure that the NPSH values of the mounted pump are fulfilled.

Liquid temperatures/cooling



In case the stated flow velocity cannot be achieved, a flow sleeve must be installed

For 37 kW MMS6 (only PVC windings), 110 kW MMS8000 and 170 kW MMS10000, the maximum liquid temperature is 5 °C lower than stated in the table above. For 190 kW MMS10000, 220-250 kW MMS12000/50 Hz and MMS12000/60 Hz, the temperature is 10 °C lower than stated.



Electrical connection

DANGER Electric shock

Death or serious personal injury



- Switch off the power supply before starting any work on the product.
- Make sure that the power supply cannot be accidentally switched on.

DANGER Electric shock

Death or serious personal injury



- The pump must be earthed.
- The pump must be connected to an external main switch and must be provided with means to locking it in the OFF (isolated) position. Type and requirements are specified in EN 60204-1, 5.3.2



The electrical connection must be carried out by an authorised person in accordance with local regulations.

General



If an MS motor with temperature transmitter is connected to a frequency converter, the fuse melts and the transmitter becomes inactive. The transmitter can no longer be reactivated, consequently, the motor thereafter operates like one without a temperature transmitter.



To enable monitoring of the motor temperature when running at frequency converter operation, Grundfos recommends that a Pt100 or a Pt1000 sensor be installed.



During frequency converter operation, it is not advisable to run the motor at a frequency higher than the rated frequency (50 or 60 Hz). In connection with pump operation, it is important never to reduce the frequency (and consequently the speed) to such a level that the necessary flow of cooling liquid past the motor is no longer ensured.

Single-phase motors

DANGER Electric shock

Death or serious personal injury



- Switch off the power supply before starting any work on the product.
- Make sure that the power supply cannot be accidentally switched on.

DANGER Electric shock

Death or serious personal injury



- The pump must be connected to protective earth.
- Switch off the power supply before starting any work on the product.
- Make sure that the power supply cannot be accidentally switched on.

DANGER Electric shock

Death or serious personal injury



- When the motor has been thermally switched off, the motor terminals are still live. When the motor has cooled sufficiently, it will restart automatically.

Required settings of the motor-protective circuit breaker



If this requirement is not met, the motor warranty will be invalidated.

Cable sizing



Submersible motor cables are dimensioned for submersion in the liquid, and will not necessarily have sufficient cross-section to be in the air.

Control of single-phase MS402



Single-phase MS402 submersible motors below 1.1 kW incorporate motor protection that cuts out the motor in case of excessive winding temperatures while the motor is still supplied with voltage. Allow for this when the motor forms part of a control system.

Checking the direction of rotation of the pump set



The pump must not be started until the suction interconnector has been completely submerged in the liquid.

Frequency converter



During frequency converter operation, it is not advisable to run the motor at a frequency higher than the rated frequency (50 or 60 Hz). In connection with pump operation, it is important never to reduce the frequency (and consequently the speed) to such a level that the necessary flow of cooling liquid past the motor is no longer ensured.



To enable monitoring of the motor temperature, Grundfos recommends that a Pt100 or a Pt1000 be installed.

Motor installation

DANGER **Electric shock**

Death or serious personal injury

- Switch off the power supply before starting any work on the product.
- Make sure that the power supply cannot be accidentally switched on.



DANGER **Electric shock**

Death or serious personal injury

- Make sure that motor cable ends are not live before starting any work on the product.
- Make sure that the power supply cannot be accidentally switched on.



In case of unintended flow of water through a non-energized pump, there is a risk that the moving parts of the pump and the motor will start rotating, thereby generating voltage over the terminals. The size of the voltage depends on the speed of rotation. Consequently, the motor terminals must be considered as live until proven otherwise.

Removing and fitting the cable guard



Once the cable guard is fitted, make sure that the pump chambers are aligned.

Assembly of pump set on site

DANGER **Electric shock**

Death or serious personal injury

- Switch off the power supply before starting any work on the product.
- Make sure that the power supply cannot be accidentally switched on.
- Do not lower or lift the product by means of the motor cable.



WARNING **Crushing of hands**

Death or serious personal injury

- When the motor is to be assembled with the pump at the borehole, make sure to use suitable pipe clamps.
- Stay clear of the wire and cable while placing the motor in the borehole.



WARNING **Crushing of feet**

Death or serious personal injury

- When the motor is to be assembled with the pump at the borehole, make sure to use suitable pipe clamps.
- Stay clear of the wire and cable while placing the motor in the borehole.



Fitting the pump to the motor

WARNING

Sharp element

Death or serious personal injury

- When mounting the facilitating pipe, wear personal protective equipment to avoid cutting on sharp edges.



WARNING

Crushing of hands

Death or serious personal injury

- Make sure to use suitable pipe clamps.
- Stay clear of the wire and cable while placing the motor in the borehole.



WARNING

Crushing of feet

Death or serious personal injury

- Make sure to use suitable pipe clamps.
- Stay clear of the wire and cable while placing the motor in the borehole.



Be careful not to bend or damage long pump sets when moving them from horizontal to vertical positions.



Grundfos recommends that a maximum 30 cm long facilitating pipe be fitted to the pump to facilitate handling of the pump during installation.



Make sure that the coupling between the pump and the motor engages properly.

Lowering the pump

DANGER

Electric shock

Death or serious personal injury

- Switch off the power supply before starting any work on the product.
- Make sure that the power supply cannot be accidentally switched on.
- Do not lower or lift the product by means of the motor cable.



WARNING

Crushing of hands

Death or serious personal injury

- When the motor is to be assembled with the pump at the borehole, make sure to use suitable pipe clamps.
- Stay clear of the wire and cable while placing the motor in the borehole.



WARNING

Crushing of feet

Death or serious personal injury

- When the motor is to be assembled with the pump at the borehole, make sure to use suitable pipe clamps.
- Stay clear of the wire and cable while placing the motor in the borehole.



Maintenance and service

DANGER

Electric shock

Death or serious personal injury

- Switch off the power supply before starting any work on the product.
- Make sure that the power supply cannot be accidentally switched on.



DANGER

Toxic material

Death or serious personal injury

- If a pump is used for a liquid injurious to health, the pump will be classified as contaminated.



WARNING

Sharp element

Death or serious personal injury

- For service, see the service instructions. Service must be performed by qualified personnel.



MS6000P

DANGER

Magnetic field

Death or serious personal injury

- The rotor dismantled from the motor must never be handled by anyone with a pacemaker.



WARNING

Crushing of fingers

Death or serious personal injury

- Keep the surroundings of the dismantled rotor free of magnetic objects, and be careful when placing the rotor on a magnetic surface.



DANGER**Electric shock**

Death or serious personal injury



- Before starting any work on the product, make sure that motor cable ends are not live.
- Make sure that the power supply cannot be accidentally switched on.

If a flow of water unintentionally goes through a non-energized pump, there is a risk that the moving parts of the pump and the motor will start rotating, thereby generating voltage over the terminals. The size of the voltage depends on the speed of rotation. Consequently, the motor terminals must be considered as live until proven otherwise.

DANGER**Electric shock**

Death or serious personal injury



- Before starting any work on the product, make sure that motor cable ends are not live.
- Make sure that the power supply cannot be accidentally switched on.

If a flow of water unintentionally goes through a non-energized pump there is a risk that the moving parts of the pump and the motor will start rotating, thereby generating voltage over the terminals. The size of the voltage depends on the speed of rotation. Consequently, the motor terminals must be considered as live until proven otherwise.

Fault finding**DANGER****Electric shock**

Death or serious personal injury



- Before starting any work on the product, make sure that motor cable ends are not live.
- Make sure that the power supply cannot be accidentally switched on.

Checking the motor and cable**DANGER****Electric shock**

Death or serious personal injury



- Switch off the power supply before starting any work on the product.
- Make sure that the power supply cannot be accidentally switched on.

DANGER**Toxic material**

Death or serious personal injury



- If a product is used for a liquid injurious to health, the pump will be classified as contaminated.

MS6000P**DANGER****Electric shock**

Death or serious personal injury



- Before starting any work on the product, make sure that motor cable ends are not live.
- Make sure that the power supply cannot be accidentally switched on.

MS6000P**DANGER****Magnetic field**

Death or serious personal injury



- The rotor dismantled from the motor must never be handled by anyone with a pacemaker.

If a flow of water unintentionally goes through a non-energized pump there is a risk that the moving parts of the pump and the motor will start rotating, thereby generating voltage over the terminals. The size of the voltage depends on the speed of rotation. Consequently, the motor terminals must be considered as live until proven otherwise.

WARNING**Crushing of hands**

Death or serious personal injury



- Keep the surroundings of the dismantled rotor free of magnetic objects and be careful when placing the rotor on a magnetic surface.

Disposing of the product

The crossed-out wheelie bin symbol on a product means that it must be disposed of separately from household waste. When a product marked with this symbol reaches its end of life, take it to a collection point designated by the local waste disposal authorities. The separate collection and recycling of such products will help protect the environment and human health.

Declaration of conformity

GB: EU declaration of conformity

We, Grundfos, declare under our sole responsibility that the products MS, MMS, to which the declaration below relates, are in conformity with the Council Directives listed below on the approximation of the laws of the EU member states.

CZ: Prohlášení o shodě EU

My firma Grundfos prohlašujeme na svou plnou odpovědnost, že výrobky MS, MMS, na které se toto prohlášení vztahuje, jsou v souladu s níže uvedenými ustanoveními směrnice Rady pro sbližení právních předpisů členských států Evropského společenství.

DK: EU-overensstemmelseserklæring

Vi, Grundfos, erklærer under ansvar at produkterne MS, MMS som erklæringen nedenfor omhandler, er i overensstemmelse med Rådets direktiver der er nævnt nedenfor, om indbyrdes tilnærmelse til EU-medlemsstaternes lovgivning.

ES: Declaración de conformidad de la UE

Grundfos declara, bajo su exclusiva responsabilidad, que los productos MS, MMS a los que hace referencia la siguiente declaración cumplen lo establecido por las siguientes Directivas del Consejo sobre la aproximación de las legislaciones de los Estados miembros de la UE.

FR: Déclaration de conformité UE

Nous, Grundfos, déclarons sous notre seule responsabilité, que les produits MS, MMS, auxquels se réfère cette déclaration, sont conformes aux Directives du Conseil concernant le rapprochement des législations des États membres UE relatives aux normes énoncées ci-dessous.

HR: EU deklaracija sukladnosti

Mi, Grundfos, izjavljujemo s punom odgovornošću da su proizvodi MS, MMS, na koja se izjava odnosi u nastavku, u skladu s dolje navedenim direktivama Vijeća o usklađivanju zakona država članica EU-a.

IT: Dichiarazione di conformità UE

Grundfos dichiara sotto la sua esclusiva responsabilità che i prodotti MS, MMS, ai quale si riferisce questa dichiarazione, sono conformi alle seguenti direttive del Consiglio riguardanti il ravvicinamento delle legislazioni degli Stati membri UE.

BG: Декларация за съответствие на EO

Ние, фирма Grundfos, заявяваме с пълна отговорност, че продуктите MS, MMS, за които се отнася настоящата декларация, отговарят на следните директиви на Съвета за уеднавяване на правните разпоредби на държавите-членки на EO.

DE: EU-Konformitätserklärung

Wir, Grundfos, erklären in alleiniger Verantwortung, dass die Produkte MS, MMS, auf die sich diese Erklärung bezieht, mit den folgenden Richtlinien des Rates zur Angleichung der Rechtsvorschriften der EU-Mitgliedsstaaten übereinstimmen.

EE: EÜ vastavusdeklaratsioon

Meie, Grundfos, kinnitame ja kanname ainuisikulist vastutust selle eest, et toode MS, MMS, mille kohta all olev deklaratsioon käib, on kooskõlas Nõukogu Direktiividega, mis on nimetatud all pool vastavalt vastuvõetud õigusaktidele ühtlustamise kohta EÜ liikmesriikides.

FI: EU-vaatimustenmukaisuusvakuutus

Grundfos vakuuttaa omalla vastuullaan, että tuotteet MS, MMS, joita tämä vakuutus koskee, ovat EU:n jäsenvaltioiden lainsäädännön lähentämiseen tähtäävien Euroopan neuvoston direktiivien vaatimusten mukaisia seuraavasti.

GR: Δήλωση συμμόρφωσης ΕΕ

Εμείς, η Grundfos, δηλώνουμε με αποκλειστικά δική μας ευθύνη ότι τα προϊόντα MS, MMS, στα οποία αναφέρεται η παρακάτω δήλωση, συμμορφώνονται με τις παρακάτω Οδηγίες του Συμβουλίου περί προσέγγισης των νομοθεσιών των κρατών μελών της ΕΕ.

HU: EU megfeleléségi nyilatkozat

Mi, a Grundfos vállalat, teljes felelősséggel kijelentjük, hogy a(z) MS, MMS termékek, amelyre az alábbi nyilatkozat vonatkozik, megfelelnek az Európai Unió tagállamainak jogi irányelveit összehangoló tanács alábbi előírásainak.

LT: ES atitikties deklaracija

Mes, Grundfos, su visa atsakomybe pareiškiamo, kad produktai MS, MMS, kuriems skirta ši deklaracija, atitinka žemiau nurodytas Tarybos Direktyvas dėl ES šalių narių įstatymų suderinimo.

LV: ES atbilstības deklarācija

Sabiedrība Grundfos ar pilnu atbildību paziņo, ka produkti MS, MMS, uz kuru attiecas tālāk redzamā deklarācija, atbilst tālāk norādītajām Padomes direktīvām par ES daļiņvalstu normatīvo aktu tuvināšanu.

PL: Deklaracja zgodności UE

My, Grundfos, oświadczamy z pełną odpowiedzialnością, że nasze produkty MS, MMS, których deklaracja niniejsza dotyczy, są zgodne z następującymi dyrektywami Rady w sprawie zbliżenia przepisów prawnych państw członkowskich.

RO: Declarația de conformitate UE

Noi Grundfos declarăm pe propria răspundere că produsele MS, MMS, la care se referă această declarație, sunt în conformitate cu Directivele de Consiliu specificate mai jos privind armonizarea legilor statelor membre UE.

RU: Декларация о соответствии нормам ЕС

Мы, компания Grundfos, со всей ответственностью заявляем, что изделия MS, MMS, к которым относится нижеприведенная декларация, соответствуют нижеприведенным Директивам Совета Евросоюза о тождественности законов стран-членов ЕС.

SI: Izjava o skladnosti EU

V Grundfosu s polno odgovornostjo izjavljamo, da je izdelek MS, MMS, na katerega se spodnja izjava nanaša, v skladu s spodnjimi direktivami Sveta o približevanju zakonodaje za izenačevanje pravnih predpisov držav članic EU.

TR: AB uygunluk bildirgesi

Grundfos olarak, aşağıdaki bildirim konusu olan MS, MMS ürünlerinin, AB Üye ülkelerinin direktiflerinin yakınlaştırılmasıyla ilgili durumun aşağıdaki Konsey Direktifleriyle uyumlu olduğunu ve bununla ilgili olarak tüm sorumluluğun bize ait olduğunu beyan ederiz.

CN: 欧盟符合性声明

我们，格兰富，在我们的全权责任下声明，产品 MS, MMS 系列，其制造和性能完全符合以下所列欧盟委员会指令。

(AR) إقرار مطابقة الاتحاد الأوروبي (EU)

نقر نحن، جروندفوس، بمقتضى مسؤوليتنا الفردية بأن المنتجين MS, MMS، اللذين يختص بهما الإقرار أدناه، يكونان مطابقين لتوجيهات المجلس المذكورة أدناه بشأن التقريب بين قوانين الدول أعضاء الاتحاد الأوروبي (EU).

NL: EU-conformiteitsverklaring

Wij, Grundfos, verklaren geheel onder eigen verantwoordelijkheid dat de producten MS, MMS, waarop de onderstaande verklaring betrekking heeft, in overeenstemming zijn met de onderstaande Richtlijnen van de Raad inzake de onderlinge aanpassing van de wetgeving van de EU-lidstaten.

PT: Declaração de conformidade UE

A Grundfos declara sob sua única responsabilidade que os produtos MS, MMS, aos quais diz respeito a declaração abaixo, estão em conformidade com as Directivas do Conselho sobre a aproximação das legislações dos Estados Membros da UE.

RS: Deklaracija o usklađenosti EU

Mi, kompanija Grundfos, izjavljujemo pod punom vlastitom odgovornošću da je proizvod MS, MMS, na koji se odnosi deklaracija ispod, u skladu sa delo prikazanim direktivama Saveta za usklađivanje zakona država članica EU.

SE: EU-försäkran om överensstämmelse

Vi, Grundfos, försäkrar under ansvar att produkterna MS, MMS, som omfattas av nedanstående försäkran, är i överensstämmelse med de rådskdirektiv om inbördes närmande till EU-medlemsstaternas lagstiftning som listas nedan.

SK: ES vyhlásenie o zhode

My, spoločnosť Grundfos, vyhlasujeme na svoju plnú zodpovednosť, že produkty MS, MMS na ktoré sa vyhlásenie uvedené nižšie vzťahuje, sú v súlade s ustanoveniami nižšie uvedených smerníc Rady pre zblíženie právnych predpisov členských štátov EÚ.

UA: Декларація відповідності директивам EU

Ми, компанія Grundfos, під нашу одноосібну відповідальність заявляємо, що вироби MS, MMS, до яких відноситься нижченаведена декларація, відповідають директивам EU, переліченим нижче, щодо тотожності законів країн-членів ЄС.

KZ: Сәйкестік жөніндегі ЕО декларациясы

Біз, Grundfos, ЕО мүше елдерінің заңдарына жақын төменде көрсетілген Кеңес директиваларына сәйкес төмендегі декларацияға қатысты MS, MMS өнімдері біздің жеке жауапкершілігімізде екенін мәлімдейміз.

VI: Tuyên bố tuân thủ EU

Chúng tôi, Grundfos, tuyên bố trong phạm vi trách nhiệm duy nhất của mình rằng sản phẩm MS, MMS mà tuyên bố dưới đây có liên quan tuân thủ các Chỉ thị Hội đồng sau về việc áp dụng luật pháp của các nước thành viên EU.

Valid for Grundfos products:MS402, MS4000,
MS6000, MS6000P, MMS6, MMS8000, MMS10000,
MMS12000

- Low Voltage Directive (2014/35/EU).
Standard used: EN 60034-1: 2010.
- EMC Directive (2014/30/EU).
Standard used: EN 60034-1: 2010.
(Applies only to motors with Tempcon sensors)
- RoHS Directive: 2011/65/EU and 2015/863/EU
Standards used: EN 63000:2018

This EU declaration of conformity is only valid when
published as part of the Grundfos installation and
operating instructions (publication number
99464838).

Bjerringbro, 05/March/2021



Frank S. Madsen
Capability Manager, Electronics
Grundfos Holding A/S
Poul Due Jensens Vej 7
8850 Bjerringbro, Denmark

Person authorised to compile technical file and
empowered to sign the EU declaration of conformity.

Declaration of conformity

UK declaration of conformity

We, Grundfos, declare under our sole responsibility that the products to which the declaration below relates, are in conformity with UK regulations, standards and specifications to which conformity is declared, as listed below:

Valid for products:

MS402, MS4000, MS6000, MS6000P, MMS6,
MMS8000, MMS10000, MMS12000

- Electrical Equipment (Safety) Regulations 2016.
Standard used: EN 60034-1:2010
- Electromagnetic Compatibility Regulations 2016
Standard used: EN 60034-1:2010
(Applies only to motors with Tempcon sensors.)
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2019
Standard used: IEC EN 63000:2018

These motors must not be put into service until the machinery into which they are to be incorporated has been declared in conformity with the relevant directives.

This UK declaration of conformity is only valid when accompanying Grundfos instructions.

UK Importer: Grundfos Pumps Ltd. Grovebury Road,
Leighton Buzzard, LU7 4TL.
Bjerringbro, 05/March/2021



Frank S. Madsen
Capability Manager, Electronics
Grundfos Holding A/S
Poul Due Jensens Vej 7
8850 Bjerringbro, Denmark

Manufacturer and person empowered to sign the UK
declaration of conformity.

10000354231

Declaration of conformity



GB: Moroccan declaration of conformity

We, Grundfos, declare under our sole responsibility that the products to which the declaration below relates, are in conformity with Moroccan laws, orders, standards and specifications to which conformity is declared, as listed below:

Valid for Grundfos products:

MS402, MS4000, MS6000, MS6000P, MMS6, MMS8000, MMS10000, MMS12000

Law No 24-09, 2011 Safety of products and services and the following orders:

Order No 2573-14, 2015 Safety Requirements for Low Voltage Electrical Equipment

Standards used: NM EN 60034-1:2019

Order No 2574-14, 2015 Electromagnetic Compatibility

Standards used: NM EN 60034-1:2019

(Applies only to motors with Tempcon sensors)

This Moroccan declaration of conformity is only valid when accompanying Grundfos instructions.



FR: Déclaration de conformité marocaine

Nous, Grundfos, déclarons sous notre seule responsabilité que les produits auxquels se réfère cette déclaration, sont conformes aux lois, ordonnances, normes et spécifications marocaines pour lesquelles la conformité est déclarée, comme indiqué ci-dessous :

Valable pour les produits Grundfos :

MS402, MS4000, MS6000, MS6000P, MMS6, MMS8000, MMS10000, MMS12000

Sécurité des produits et services, loi n° 24-09, 2011 et décrets suivants :

Exigences de sécurité pour les équipements électriques basse tension, ordonnance n° 2573-14, 2015

Normes utilisées : NM EN 60034-1:2019

Compatibilité électromagnétique, ordonnance n° 2574-14, 2015

Normes utilisées : NM EN 60034-1:2019

(S'applique uniquement aux moteurs équipés de capteurs Tempcon)

Cette déclaration de conformité marocaine est uniquement valide lorsqu'elle accompagne la notice d'installation et de fonctionnement Grundfos.



AR: إقرار المطابقة المغربي

نحن، جروندفوس، نقر تحت مسؤوليتنا وحدنا بأن المنتجات التي يتعلق بها الإقرار أدناه، تتوافق مع القوانين والقرارات والمعايير والمواصفات المغربية التي تم إقرار المطابقة بشأنها، كما هو موضح أدناه:

سار على منتجات جروندفوس:

MS402, MS4000, MS6000, MS6000P, MMS6, MMS8000, MMS10000, MMS12000

قانون رقم 24-09، 2011 بشأن سلامة المنتجات والخدمات والقرارات التالية:

القرار رقم 2573-14، 2015 متطلبات السلامة للمعدات الكهربائية ذات الجهد المنخفض

المعايير المستخدمة: NM EN 60034-1:2019

القرار رقم 2574-14، 2015 التوافق الكهرومغناطيسي

المعايير المستخدمة: NM EN 60034-1:2019

(ينطبق فقط على المحركات المزودة بأجهزة استشعار Tempcon)

يكون إقرار المطابقة المغربي صالحاً فقط عند نشره كجزء من تعليمات جروندفوس.

Bjerringbro, 05/March/2021



Frank S. Madsen
Capability Manager, Electronics
Grundfos Holding A/S
Poul Due Jensens Vej 7
8850 Bjerringbro, Denmark

GB: Manufacturer and person empowered to sign the Moroccan declaration of conformity.

FR: Fabricant et personne habilitée à signer la Déclaration de conformité marocaine.

AR: الجهة المصنعة والشخص المفوض بتوقيع إقرار المطابقة المغربي.

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500/Industin
1619 - Garin Pcia. de B.A.
Tel.: +54-3327 414 444
Fax: +54-3327 45 3190

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Tel.: +61-8-8461-4611
Fax: +61-8-8340-0155

Austria

GRUNDFOS Pumpen Vertrieb
Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Fax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomssesteenweg 81-83
B-2630 Aartselaar
Tel.: +32-3-870 7300
Fax: +32-3-870 7301

Belarus

Представительство ГРУНДФОС в
Минске
220125, Минск
ул. Шафарнянская, 11, оф. 56, БЦ
«Порт»
Тел.: +375 17 397 397 3
+375 17 397 397 4
Факс: +375 17 397 397 1
E-mail: minsk@grundfos.com

Bosnia and Herzegovina

GRUNDFOS Sarajevo
Zmaja od Bosne 7-7A
BiH-71000 Sarajevo
Tel.: +387 33 592 480
Fax: +387 33 590 465
www.ba.grundfos.com
E-mail: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo
Branco, 630
CEP 09850 - 300
São Bernardo do Campo - SP
Tel.: +55-11 4393 5533
Fax: +55-11 4343 5015

Bulgaria

Grundfos Bulgaria EOOD
Slatina District
Iztocna Tangenta street no. 100
BG - 1592 Sofia
Tel.: +359 2 49 22 200
Fax: +359 2 49 22 201
E-mail: bulgaria@grundfos.bg

Canada

GRUNDFOS Canada inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Tel.: +1-905 829 9533
Fax: +1-905 829 9512

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
10F The Hub, No. 33 Suhong Road
Minhang District
Shanghai 201106 PRC
Tel.: +86 21 612 252 22
Fax: +86 21 612 253 33

Colombia

GRUNDFOS Colombia S.A.S.
Km 1.5 via Siberia-Cota Conj. Potrero
Chico,
Parque Empresarial Arcos de Cota Bod.
1A.
Cota, Cundinamarca
Tel.: +57(1)-2913444
Fax: +57(1)-8764586

Croatia

GRUNDFOS CROATIA d.o.o.
Buzinski prilaz 38, Buzin
HR-10010 Zagreb
Tel.: +385 1 6595 400
Fax: +385 1 6595 499
www.hr.grundfos.com

Czech Republic

GRUNDFOS Sales Czechia and Slovakia
s.r.o.
Čajkovského 21
779 00 Olomouc
Tel.: +420-585-716 111

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tel.: +45-87 50 50 50
Fax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Peterburi tee 92G
11415 Tallinn
Tel.: + 372 606 1690
Fax: + 372 606 1691

Finland

OY GRUNDFOS Pumput AB
Trukkikuja 1
FI-01360 Vantaa
Tel.: +358-(0) 207 889 500

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombe
F-38290 St. Quentin Fallavier (Lyon)
Tel.: +33-4 74 82 15 15
Fax: +33-4 74 94 10 51

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Fax: +49-(0) 211 929 69-3799
E-mail: infoservice@grundfos.de
Service in Deutschland:
kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Tel.: +0030-210-66 83 400
Fax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor, Siu Wai industrial
Centre
29-33 Wing Hong Street & 68 King Lam
Street, Cheung Sha Wan
Kowloon
Tel.: +852-27861706 / 27861741
Fax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Tópark u. 8
H-2045 Törökbalint
Tel.: +36-23 511 111
Fax: +36-23 511 111

India

GRUNDFOS Pumps india Private Limited
118 Old Mahabalipuram Road
Thoraiakkam
Chennai 600 097
Tel.: +91-44 2496 6800

Indonesia

PT GRUNDFOS Pompa
Graha intirub Lt. 2 & 3
Jln. Cililitan Besar No.454, Makasar,
Jakarta Timur
ID-Jakarta 13650
Tel.: +62 21-469-51900
Fax: +62 21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymount Road Lower
Dublin 12
Tel.: +353-1-4089 800
Fax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Fax: +39-02-95309290 / 95838461

Japan

GRUNDFOS Pumps K.K.
1-2-3, Shin-Miyakoda, Kita-ku
Hamamatsu
431-2103 Japan
Tel.: +81 53 428 4760
Fax: +81 53 428 5005

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Tel.: +82-2-5317 600
Fax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
 Deglava biznesa centrs
 Augusta Deglava ielā 60
 LV-1035, Rīga,
 Tel.: + 371 714 9640, 7 149 641
 Fax: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
 Smolensko g. 6
 LT-03201 Vilnius
 Tel.: + 370 52 395 430
 Fax: + 370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
 7 Jalan Peguam U1/25
 Glenmarie Industrial Park
 40150 Shah Alam, Selangor
 Tel.: +60-3-5569 2922
 Fax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de México
 S.A. de C.V.
 Boulevard TLC No. 15
 Parque industrial Stiva Aeropuerto
 Apodaca, N.L. 66600
 Tel.: +52-81-8144 4000
 Fax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
 Veluwezoom 35
 1326 AE Almere
 Postbus 22015
 1302 CA ALMERE
 Tel.: +31-88-478 6336
 Fax: +31-88-478 6332
 E-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
 17 Beatrice Tinsley Crescent
 North Harbour Industrial Estate
 Albany, Auckland
 Tel.: +64-9-415 3240
 Fax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
 Strømsveien 344
 Postboks 235, Leirdal
 N-1011 Oslo
 Tel.: +47-22 90 47 00
 Fax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
 ul. Klonowa 23
 Baranowo k. Poznania
 PL-62-081 Przeźmierowo
 Tel.: (+48-61) 650 13 00
 Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
 Rua Calvet de Magalhães, 241
 Apartado 1079
 P-2770-153 Paço de Arcos
 Tel.: +351-21-440 76 00
 Fax: +351-21-440 76 90

Romania

GRUNDFOS Pompe România SRL
 S-PARK BUSINESS CENTER, Clădirea
 A2, etaj 2
 Str. Tipografilor, Nr. 11-15, Sector 1, Cod
 013714
 Bucuresti, Romania
 Tel.: 004 021 2004 100
 E-mail: romania@grundfos.ro

Russia

ООО Грундфос Россия
 ул. Школьная, 39-41
 Москва, RU-109544, Russia
 Тел. (+7) 495 564-88-00 (495) 737-30-00
 Факс (+7) 495 564 8811
 E-mail grundfos.moscow@grundfos.com

Serbia

Grundfos Srbija d.o.o.
 Omladinskih brigada 90b
 11070 Novi Beograd
 Tel.: +381 11 2258 740
 Fax: +381 11 2281 769
 www.rs.grundfos.com

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
 25 Jalan Tukang
 Singapore 619264
 Tel.: +65-6681 9688
 Fax: +65-6681 9689

Slovakia

GRUNDFOS s.r.o.
 Prievozská 4D 821 09 BRATISLAVA
 Tel.: +421 2 5020 1426
 sk.grundfos.com

Slovenia

GRUNDFOS LJUBLJANA, d.o.o.
 Leskoškova 9e, 1122 Ljubljana
 Tel.: +386 (0) 1 568 06 10
 Fax: +386 (0) 1 568 06 19
 E-mail: tehnika-si@grundfos.com

South Africa

GRUNDFOS (PTY) LTD
 16 Lascelles Drive, Meadowbrook Estate
 1609 Germiston, Johannesburg
 Tel.: (+27) 10 248 6000
 Fax: (+27) 10 248 6002
 E-mail: lgradidge@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
 Camino de la Fuentequilla, s/n
 E-28110 Algete (Madrid)
 Tel.: +34-91-848 8800
 Fax: +34-91-628 0465

Sweden

GRUNDFOS AB
 Box 333 (Lunnagårdsgatan 6)
 431 24 Mölndal
 Tel.: +46 31 332 23 000
 Fax: +46 31 331 94 60

Switzerland

GRUNDFOS Pumpen AG
 Bruggacherstrasse 10
 CH-8117 Fällanden/ZH
 Tel.: +41-44-806 8111
 Fax: +41-44-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
 7 Floor, 219 Min-Chuan Road
 Taichung, Taiwan, R.O.C.
 Tel.: +886-4-2305 0868
 Fax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
 92 Chaloen Phrakiat Rama 9 Road
 Dokmai, Pravej, Bangkok 10250
 Tel.: +66-2-725 8999
 Fax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd.
 Sti.
 Gebze Organize Sanayi Bölgesi
 Ihsan dede Caddesi
 2. yol 200. Sokak No. 204
 41490 Gebze/ Kocaeli
 Tel.: +90 - 262-679 7979
 Fax: +90 - 262-679 7905
 E-mail: satis@grundfos.com

Ukraine

Бізнес Центр Європа
 Столичне шосе, 103
 м. Київ, 03131, Україна
 Tel.: (+38 044) 237 04 00
 Fax: (+38 044) 237 04 01
 E-mail: ukraine@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
 P.O. Box 16768
 Jebel Ali Free Zone, Dubai
 Tel.: +971 4 8815 136
 Fax: +971 4 8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
 Grovebury Road
 Leighton Buzzard/Beds. LU7 4TL
 Tel.: +44-1525-850000
 Fax: +44-1525-850011

U.S.A.

GRUNDFOS Water Utility Headquarters
 856 Koomey Road
 Brookshire, Texas 77423 USA

Uzbekistan

Grundfos Tashkent, Uzbekistan
 The Representative Office of Grundfos
 Kazakhstan in Uzbekistan
 38a, Oybek street, Tashkent
 Tel.: (+998) 71 150 3290 / 71 150 3291
 Fax: (+998) 71 150 3292

Revision Info

Last revised on 09-09-2020

99464838 072021

ECM: 1312155
